


Replace the Top Block

1. Cut dust cover at edges around glides; peel out of the way.


2. Insert top block removal tool over clip (interior of the box, bottom of the top plate):
X2 for I top block
X3 for L top block.

Note: you may need to hammer the tool onto the clip.


TIP: Be sure to cut in area that is supported by wood plate.

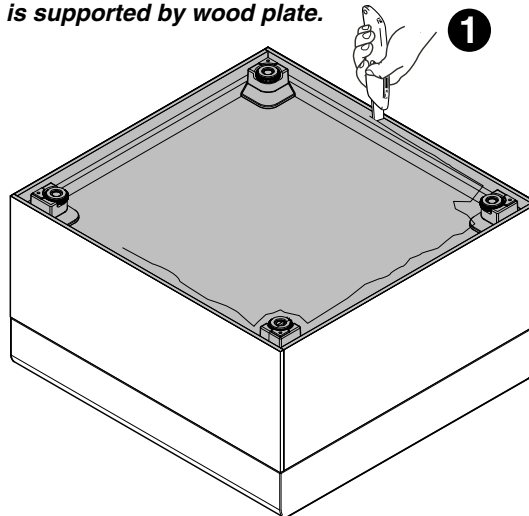



"L" top blocks

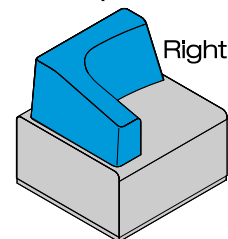

Left

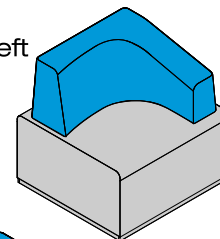

"I" top block

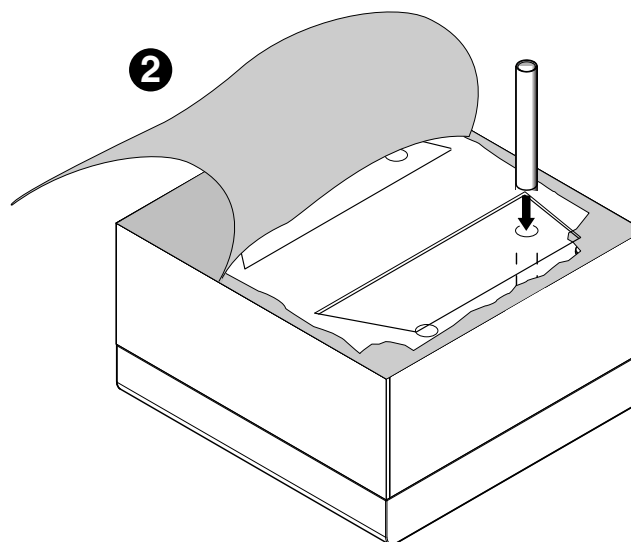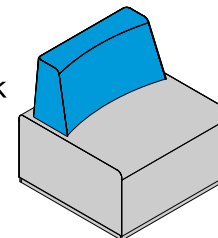

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.
(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2017 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

Replace the Top Block (continued)

3. Pull up on top block to remove.
4. Push down on new top block to assemble (refer to assembly on page 1).
5. Staple dust cover back in place.

