


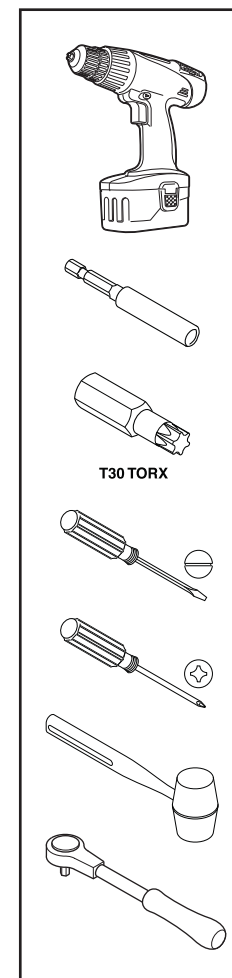
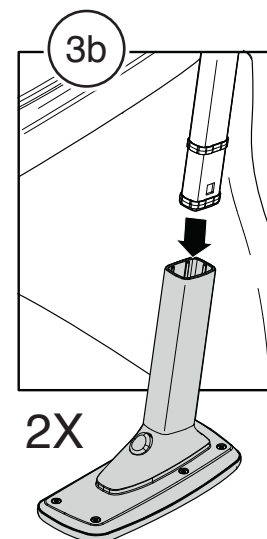
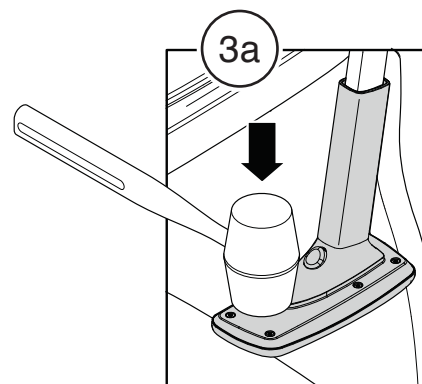
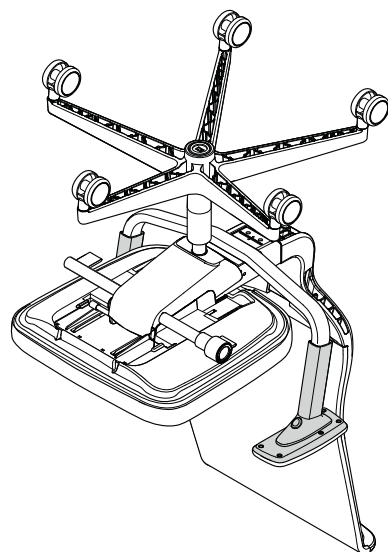
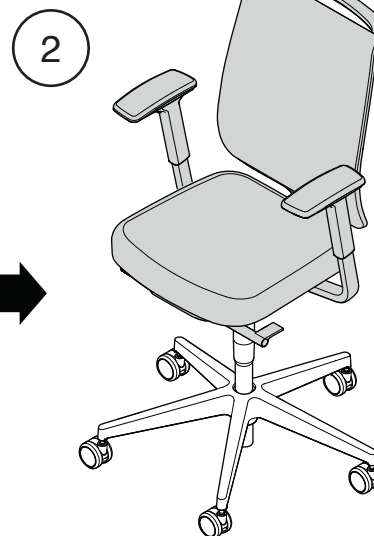
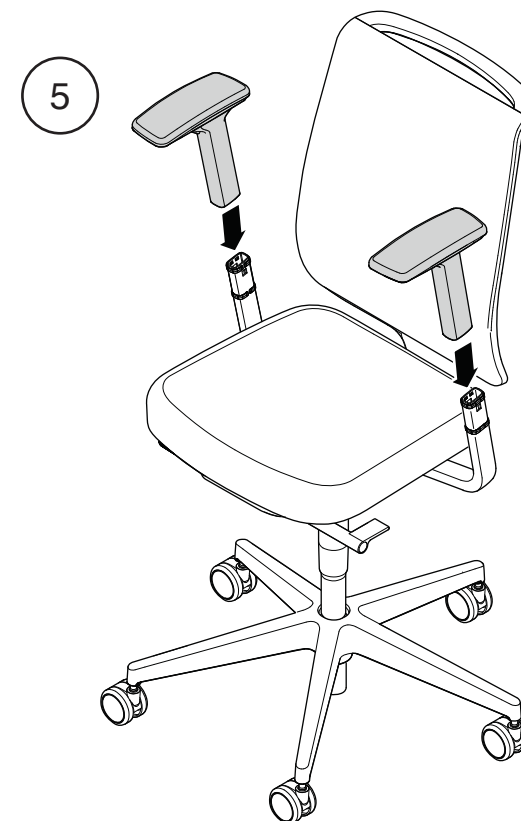



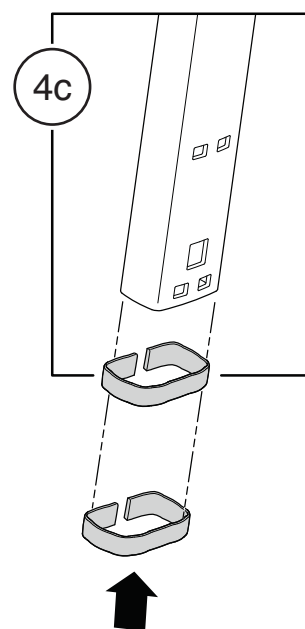


Only Arm Replacement:


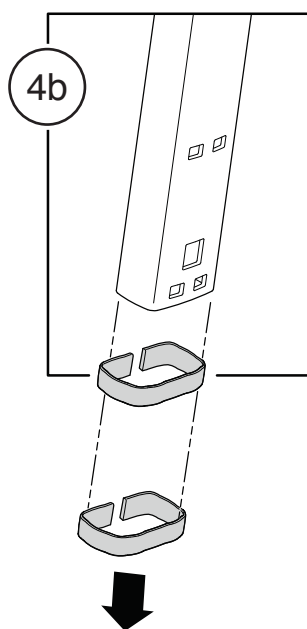


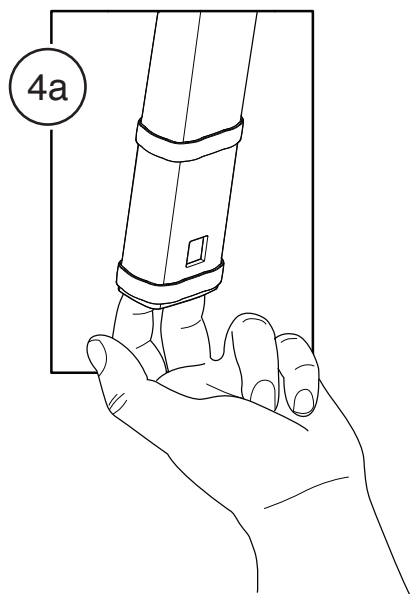

Arm and Support Replacement:

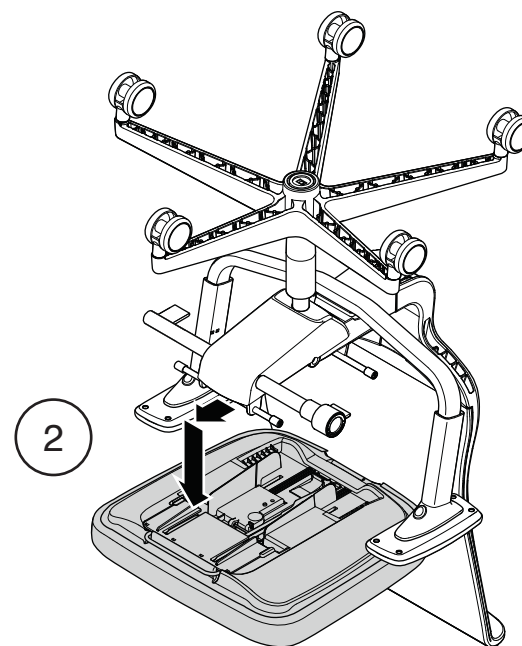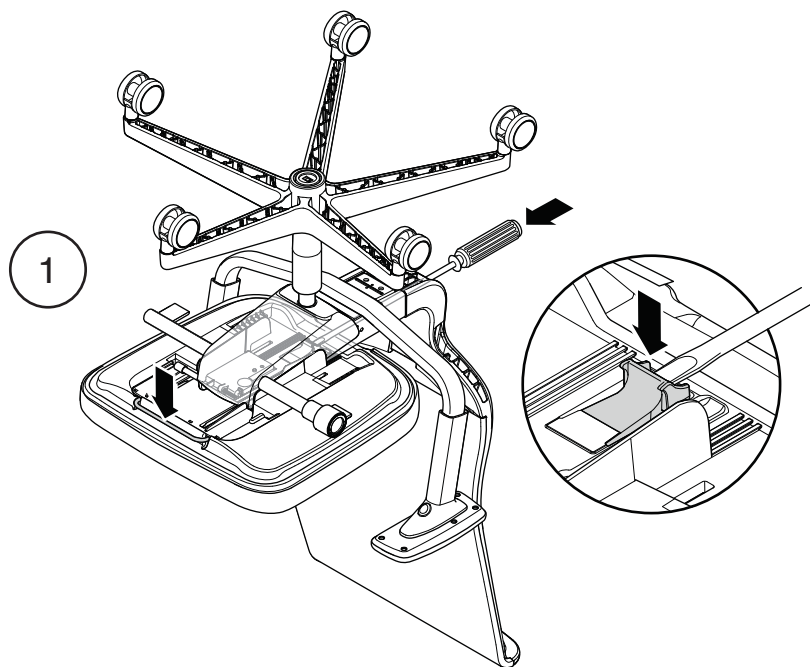

Reply Arm or Arm & Support Replacement

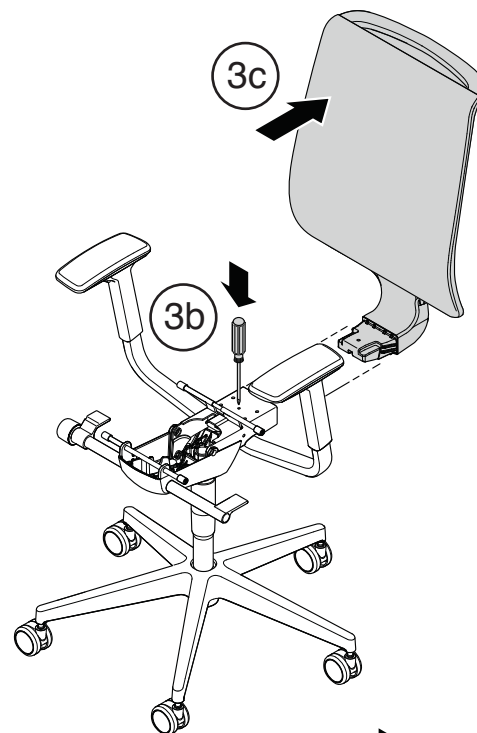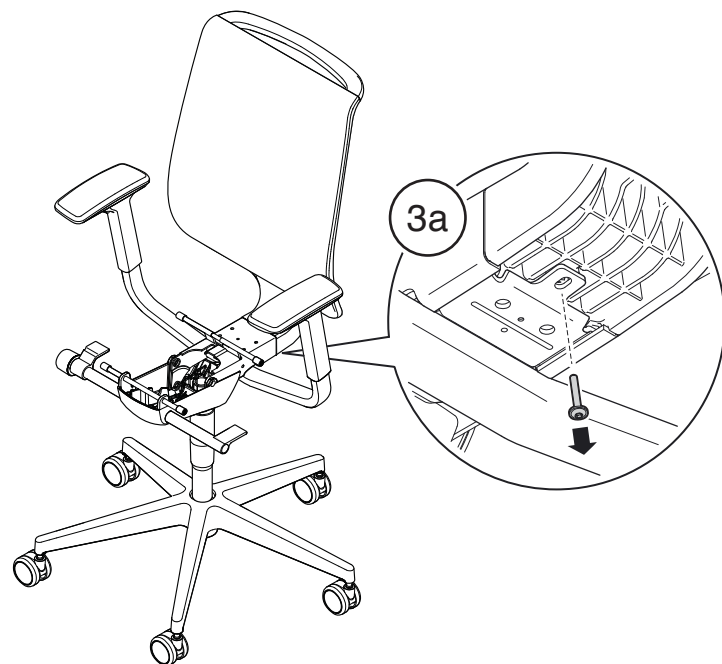

5 Reverse steps 4a and 4b to install arm & support. Torque screws to 11-13 Nm.

