


Steelcase

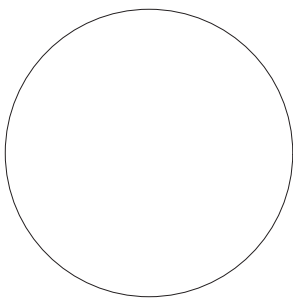

Reply®

Reply chair controls give you comfort right at your fingertips — the kind of comfort that makes it easy to sit for a long time, with the kind of control unexpected in a chair this reasonably priced. Simple, easy-to-use controls provide the adjustments you need to make sitting a pleasure.

Lumbar height*

(Mesh only) adjusts by grabbing the exposed tabs and sliding the lumbar support up or down.

Seat height

To raise the chair, lift your body weight and pull lever up. To lower the chair, stay seated and pull lever up.

Back tension

Adjusts by turning the knob forward to increase back tension or backward to decrease back tension.

Back height

Adjusts by pressing and holding the control button on the right side of the back, and sliding the back support up and down with both hands. Release the control button to lock. This feature is only available on chairs with upholstered [non-mesh] backs.

Height/Pivot/Depth Adjustable Arms*

Lift button under arm caps to adjust height. To adjust arm cap position, grasp arm cap and slide or pivot in any direction. Your elbows should stay close to your sides and your wrists straight.

Multi-position back lock

To lock, recline to desired angle and push back lock handle down. To release, lean forward, lift the handle and apply pressure to the back to disengage the lock.

Seat depth

Lift the handle and hold, slide seat forward or back, and release handle to lock. Allow 2"-3" of space between the back of your knees and the seat edge.



*Optional features (may not be included in your chair)