

Occasional Tables Cleaning & Maintenance

Melamine - Table Tops

(Breaker, Dune, Elan, Lock)

For general routine cleaning, wipe the melamine surface by applying a mild non abrasive soap solution using a soft lint free cloth. Then rinse clean with a damp lint free cloth and dry thoroughly. More stubborn stains including oil, varnish or paint may be removed when rubbed with methylated or white spirits. Then rinse tops clean with a damp lint free cloth and dry thoroughly. Furniture polishes should not be used, they can result in the build up of wax or silicone on the surface leaving smears.

Laminate - Table Tops

(Breaker, Dune, Elan)

In most cases, you only need to use a clean, damp, non-abrasive cotton cloth, and a mild liquid detergent or household cleaner. Rinse with clean water, using a clean, non-abrasive cotton cloth. Do not flood the laminate, especially near seams, since water can penetrate and cause the substrate to swell. Dry the surface with a soft, clean, non-abrasive cotton cloth.

Laminate Fenix - Table Tops

(Breaker, Dune, Elan)

Refer to specific manufacturing guidelines.

Glass - Table Tops

(Breaker, Dune, Elan)

We recommend Bohle glass cleaning spray, used in conjunction with lint free cloths.

Glass must be cleaned with a good quality proprietary glass cleaner. Care must be taken to read the manufacturer's instructions to assess its suitability and strictly follow the manufacturers health and safety handling recommendations.

Aluminium and Steel

These will be chrome plated, bright polished or powder coated depending on the components and finishes of your chair. These parts can be cleaned with a damp cloth and in the case of polished or chrome parts, buffed dry with a soft non-abrasive cloth to prevent streak marks. For chrome plated finishes, stubborn stains can be removed using a metal cleaner. Do not use abrasive cleaning agents in case of damage.

Minimise the risk of damage:

- Use coasters under glasses and hot mugs.
- Don't place potted plants on the surface less kept in a watertight container and take extreme care when watering.
- Use protective pads under any equipment.
- Avoid over exposure to direct sunlight.
- Avoid exposure to excessive heat from a fire, radiator or local high temperature light sources.
- To avoid risks of fire or shock, always disconnect electrical power when cleaning products that use or provide electricity.
- Be careful not to allow liquids to enter any openings in electrical products.

Warranty

Warranty and guarantee periods commence from delivery to site and are subject to fair wear and tear. Retention of the warranty label attached to the product will support claim authenticity when quoting the relevant N number.

Orangebox warrants exclusively to the original purchaser of our products that all products (based upon a normal 8 hour working day) will be free from defects and structurally sound for a period of five years from date of manufacture. Only approved fabrics listed in our yearly price list are covered and all materials are subject to fair wear and tear in use. This is reduced to 18 months warranty for 24 hour use or 24 months warranty for 12 hour use environments. Warranty for power modules is as per the manufacturer's warranty. All service parts carry a 1 year warranty.

Under no circumstances should a silicone polish or wax be used as these damage the finish and prevent the furniture from being refinished. Please note that we cannot be held responsible for any product to which polish has been applied.

Please contact your Orangebox representative with any queries.