steelcase inc

074 RW Network Ports used by RoomWizard

Created: 07-May-15 Approved by: KB ID: 074 rev 1

Next Review Date: 07-Aug-15 Last Revised: 21-May-15

PRODUCTS: RW

SYMPTOMS: The question arises often from customers who restrict open ports on their

network, or require firewall rules to access remote servers. This article

explains which the RoomWizard uses.

OS's:

KEYWORDS:

Refer to this table for the ports used by RoomWizard.

TCP/UDP	Port Number	Function	Source	Destination
TCP	9001	hsqldb	RW	RW (HSQLDB database)
ТСР	80	НТТР	RW Epiphany / Any Desktop browser	Connector (Web server) RW (Jetty Webserver)
ТСР	443	SSL	When RW configured RW in HTTPS/SSL mode RW RW Epiphany / Any Desktop browser	When the connector is configured in HTTPS/SSL mode Connector (Web server) RW (Jetty Webserver)
ТСР	6000	X11	RW	RW (XServer – Graphical display system on RW)
ТСР	53	DNS	RW	Configured DNS server on Device-> Network page.


074 RW Network Ports used by RoomWizard

			RW	FTP server
TCP	21	FTP	Admin Console	RW
			Desktop Browser	RW
ТСР	22	SSH	Desktop/SSH client (eg. Putty/Telnet)	RW
UDP	53	DNS	RW	Configured DNS server on Device-> Network page.
UDP	68	BootPC - DHCP	RW	DHCP server
UDP	123	NTP	RW	Configured NTP server
UDP	5000*	RW Admin Console	Admin Console (PC)	RW
UDP	5001*	RW Admin Console	RW	Admin Console (PC)

^{*} Ports 5000 and 5001 are optional. With these ports open and UDP broadcast enabled on the network, the RW Administrative Console will find the RoomWizards quicker during a search operation than without them open.

074 RW Network Ports used by RoomWizard

System in diagram form

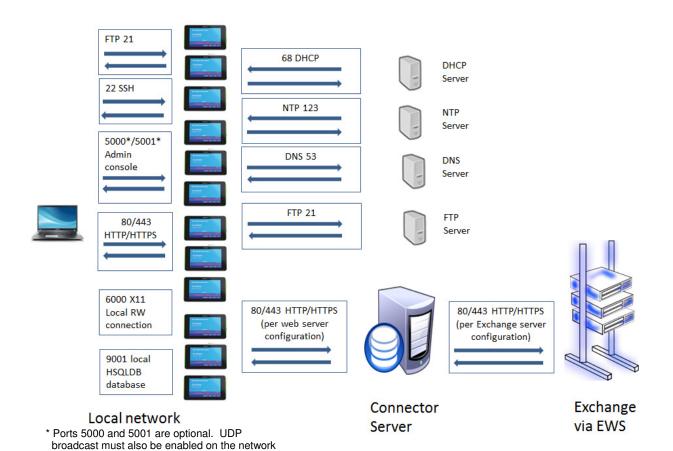

for faster search results.

Steelcase Integrated Technologies