 
 





COMPONENTS

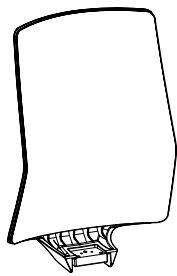


Backrest

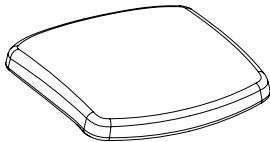

 
Seat

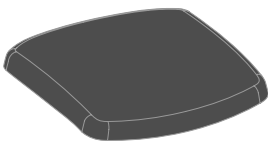


Seat Cover

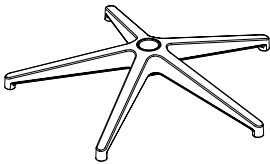 


Base

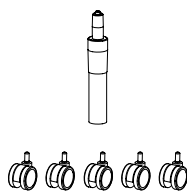 


Gas Spindle/  
Castor

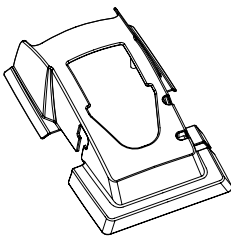 


Mechanism Cover

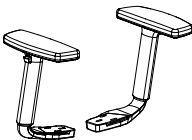 


Armrest

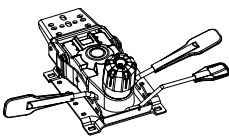 


Mechanism

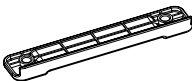 

Mechanism Bar

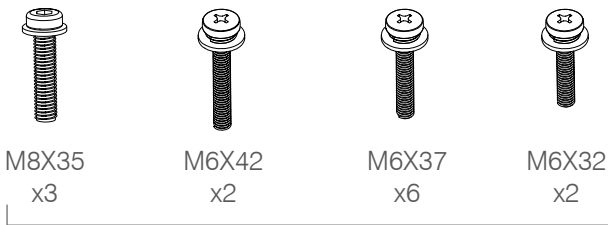 


Bolt Kit

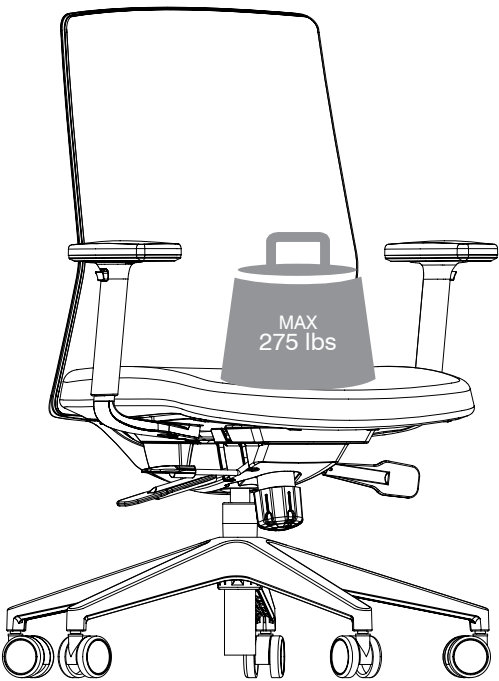 

## INSTALLATION


### Step 1

 Insert seat shell into cover and zip closed.

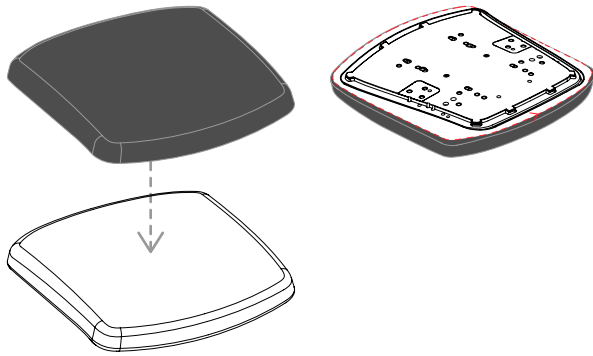


### Step 2

 Attach the armrest to the seat shell using six M6X37 bolts and tighten the six M6X37 screws.

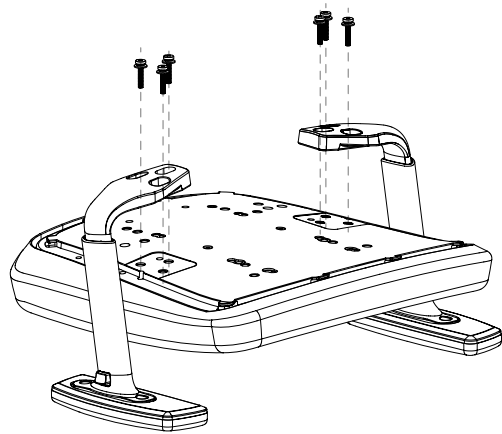


### Step 3

 Attach mechanism to seat shell using two M6X42 bolts and two M6X32 bolts with the mechanism bar as indicated below. Tighten the bolts.

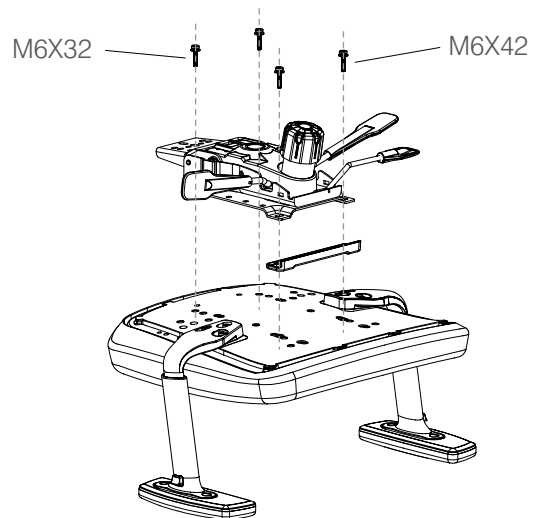

### Step 4

 
Attach backrest to seat shell using three M8X35 bolts and tighten the bolts.

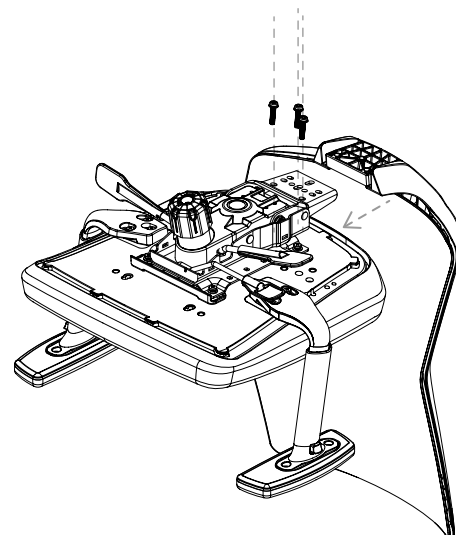

## INSTALLATION


### Step 5

 Attach mechanism cover onto mechanism and make sure the four snaps indicated in red on mechanism cover fit into the four slots on mechanism.

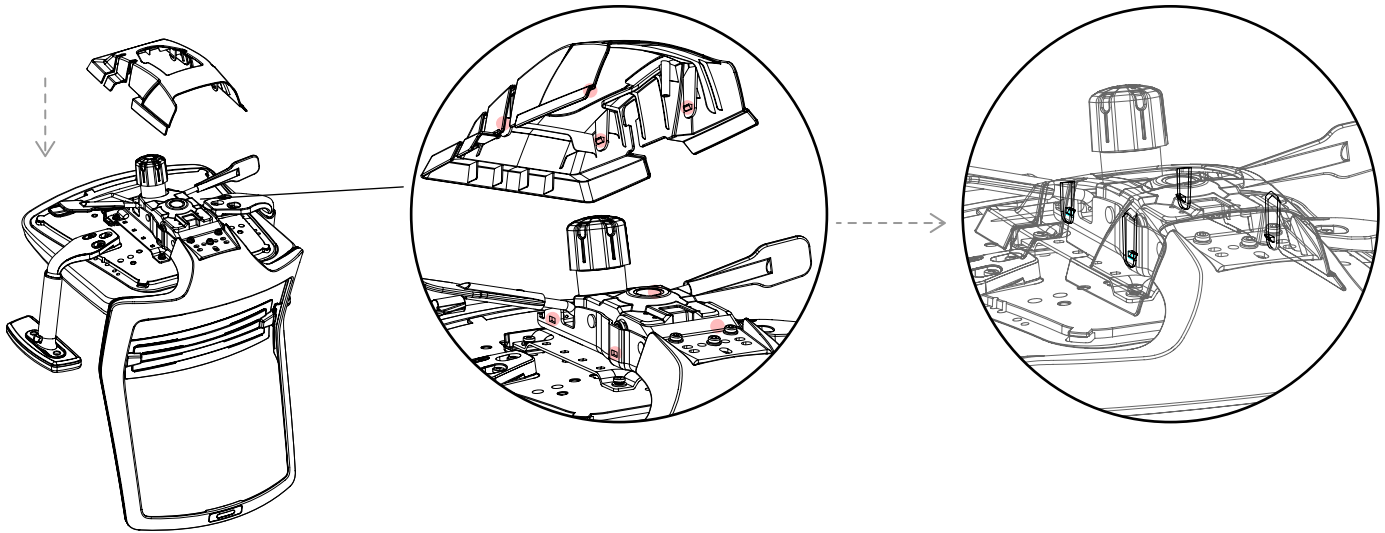


### Step 6

 Insert the castors onto leg base, then insert gas lifter onto top of leg base.

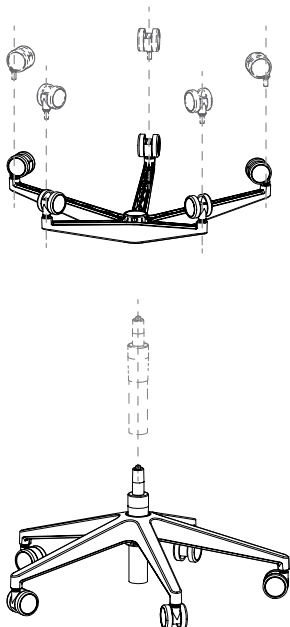


### Step 7

 Combine chair body with gas lifter via hole in mechanism.

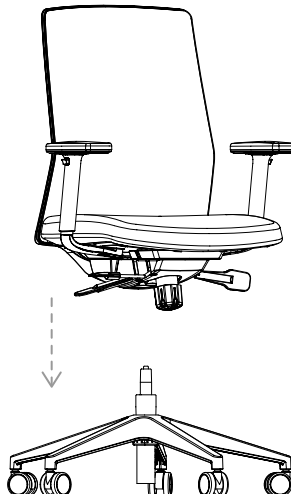

### Step 8

 
Your Bodi chair is now ready to use.

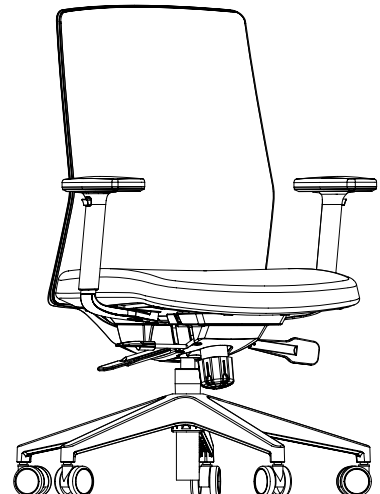

## CHANGING REMOVABLE SEAT COVERS

### Step 1

 Pull the seat forward while pushing the lever under the seat.

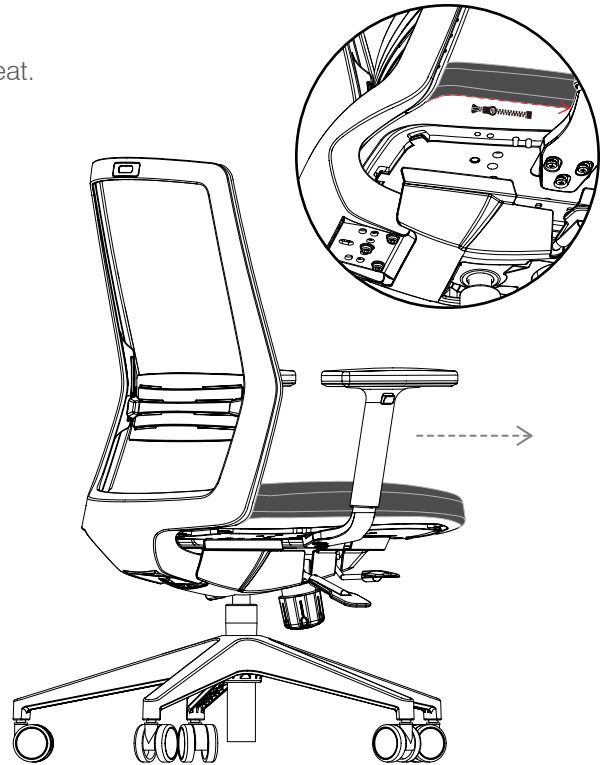

### Step 2

Unzip the zipper on the back side and remove seat cover from the seat shell. Install new seat cover and zip to close.

