 
 





COMPONENTS

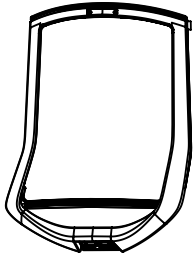


Backrest

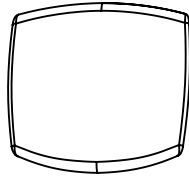

 
Seat

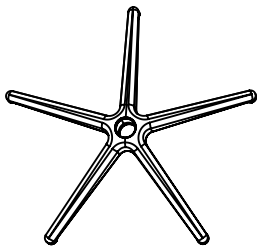


Starbase

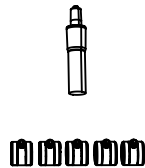 


Gas Spindle/
Castor

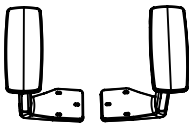 

Armrest

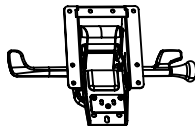 

Tilt

 

M8X35
x3



M6X32
x6



 
M6X16
x4

Bolt kit

Tools Required

Allen Keys: 4mm and 5mm

Phillips Head Screw Driver

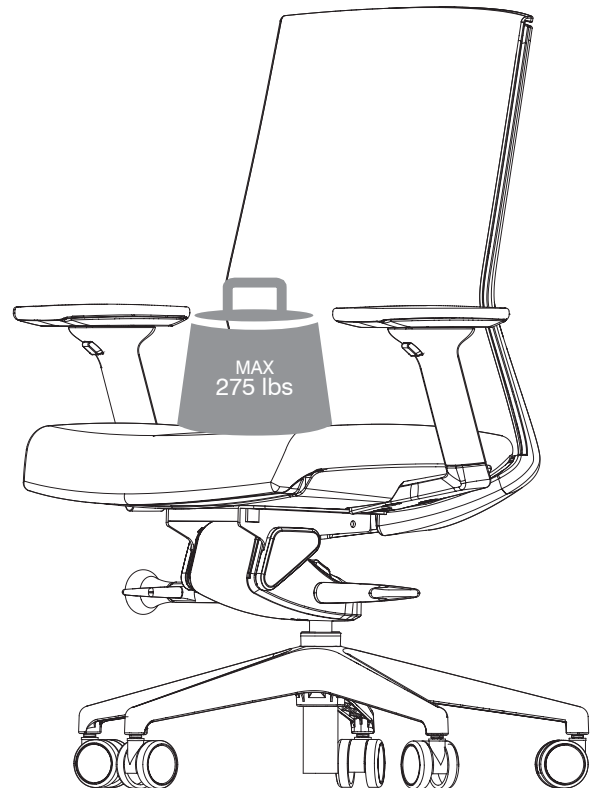


INSTALLATION

Note: You may choose to start with installing the seat cover – instructions on last page.


Step 1

 Attach the armrest to the seat shell using 6pcs M6X32 bolts (1) and tighten the 4pcs M6X16 screws (2).

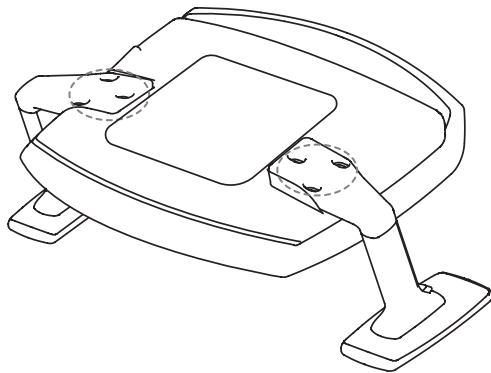


Step 2

 Attach the backrest with seat mechanism using 3pcs M8X35 allen key bolts, and tighten the 4pcs M6X16 screws.

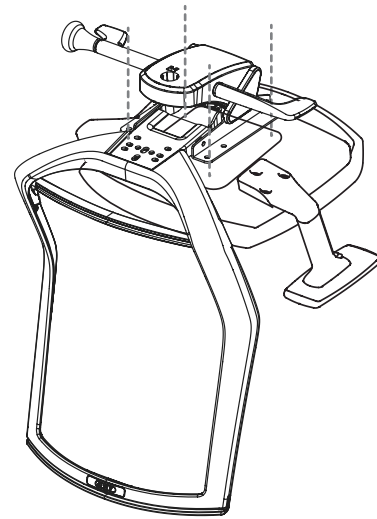


Step 3

 Insert the castors onto the leg base (1), then insert gas lifter onto the top of leg base (2).

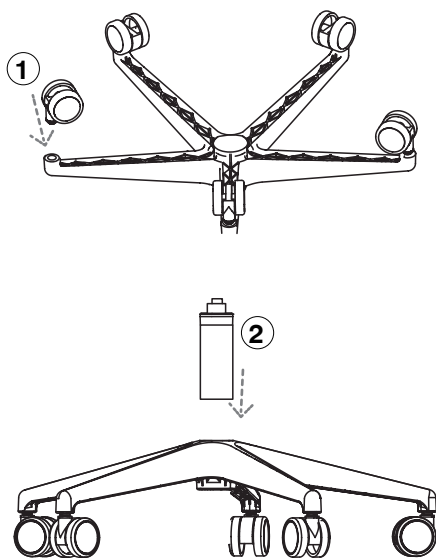

Step 4

 
Combine chair body with gas lifter via the hole on the mechanism.

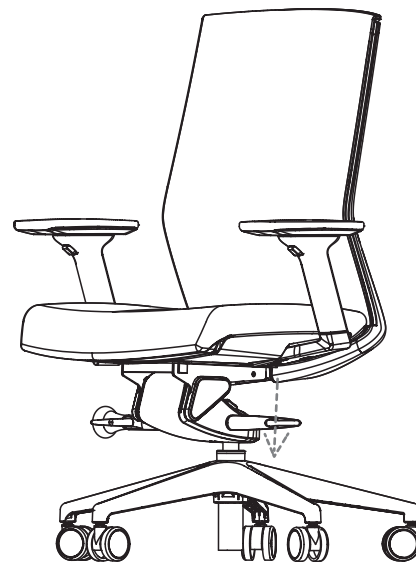

CHANGING REMOVABLE SEAT COVERS

Step 1

 Pull the seat forward while pushing the lever under the seat. Tear off both sides of velcro and detach the seat from the chair body.

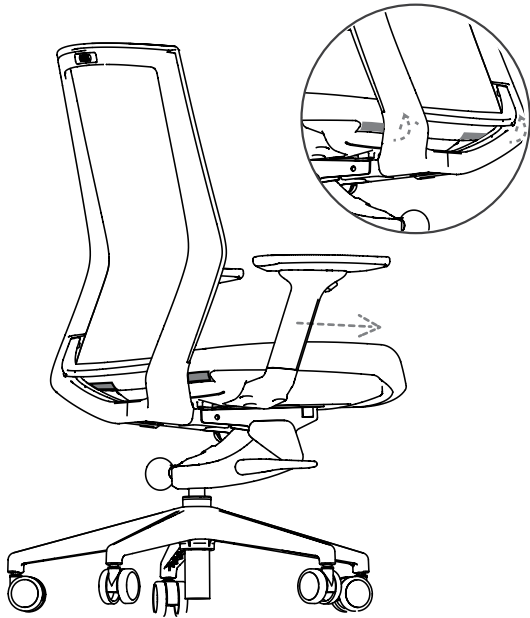

Step 2

Unzip the zipper on the back side and remove seat cover from the seat shell. Install new seat cover and zip to close.

