


Mini ToolBar position options

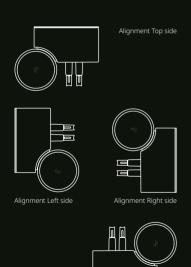

Alignment Lower side

Components









2 x Microfiber Cloth



Install your new Mini ToolBar

- 1. Prior to setting up your accessory Mini ToolBar, we recommend you perform an initial cleaning on your writing board following manufacturer recommendations.
- 2. Next, remove the Mini ToolBar from the package and place it on your magnetic writing board. You can place the Mini ToolBar four different ways. The open side should always face the board. Choose the one that fits you best!
- 3. Remove the round, magnetic eraser from the package, place in the docking system of the Mini ToolBar, then remove your writing tools and place them in the grips of the Mini ToolBar.

Keep your eraser clean

Erasers arrive assembled with a microfiber cloth. For optimal performance, keep your eraser clean and free of residue. The kit includes two additional microfiber cloths to switch out when one gets worn or dirty. Once removed, microfiber cloths can be washed for reuse. When you're ready for a fresh microfiber cloth, follow the steps from 1 to 6.

Scan the QR code for instruction video



Eraser Components



How to replace your microfiber cloth?



1 Turn the eraser upside down and rotate the ring 15° counter clockwise to unlock



4 Center the cloth



2 Remove the ring



5 Push the ring back



3 Replace the cloth



6 Rotate the ring 15°clockwise to lock