


Steelcase

MOBY S
Disassembly Instruction

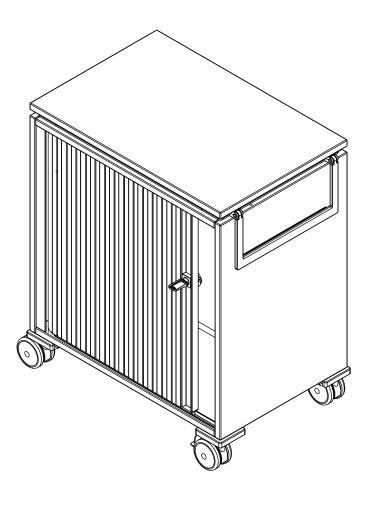

If you have a problem, question, or request, call your dealer, sales office or visit our website: www.steelcase.com

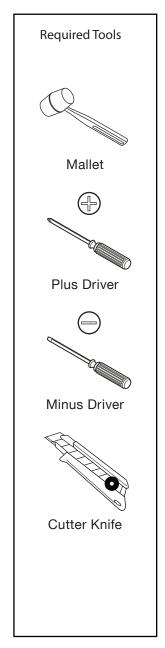

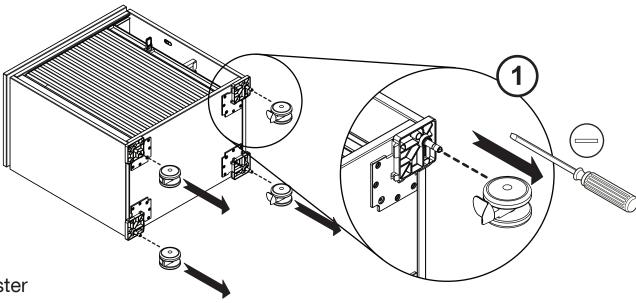


Removal for disposal of wheel caster

1. Use hands or negative driver to pull all four (4) wheel casters from Edge Protection plate (scrap)


2. Use plus driver to remove four (4) Edge Protection plate.

Bins for components removed	
PA6 30GF	PA6 30GF
(4)	(4)

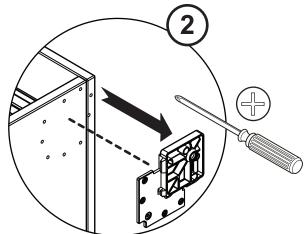

Removal of Shelves

- 3. Open the tambour door.
- 4. Remove shelves and dowel.

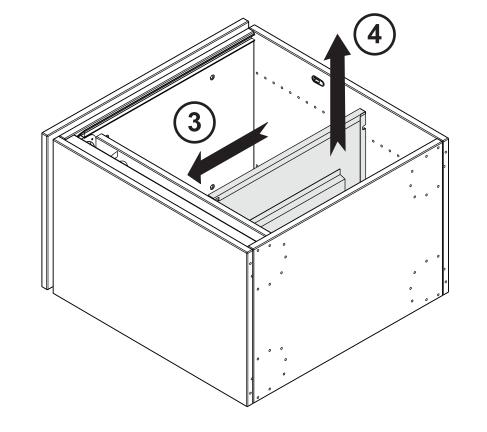

Bins for components removed	
Steel	Steel
(1 or 2)	(4 or 8)

Steelcase

MOBY S Disassembly Instruction




5. Unscrew four (4) screws (steel) at the carcass top.

6. Unscrew fourteen (14) screws (steel). Remove four (4) corner parts (aluminum) four (4) waterline aluminum extrusions.

Aluminum

corner parts (aluminum) from aluminum extrusions.				
Bins for components removed				
	Aluminum	Scrap		
(4)	(4)	LPL Board		

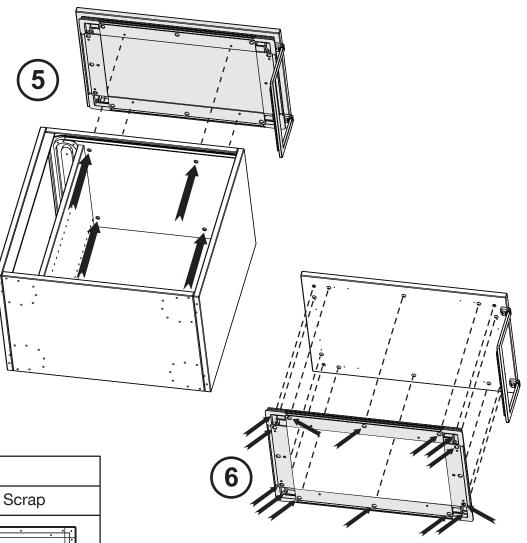



Removal of Handle


7. Unscrew two (2) screws (steel).

8. Remove handle bumper (scrap) by cutter knife.

Bins for components removed		
Scrap	Aluminum	Aluminum
Handle Bumper		(2)

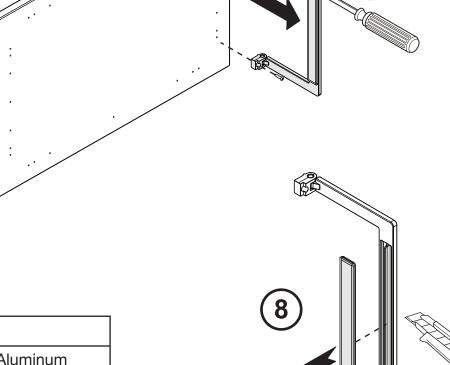


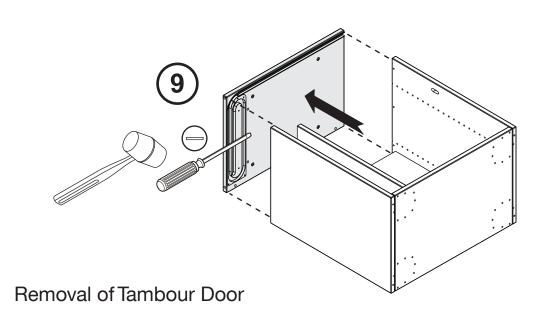


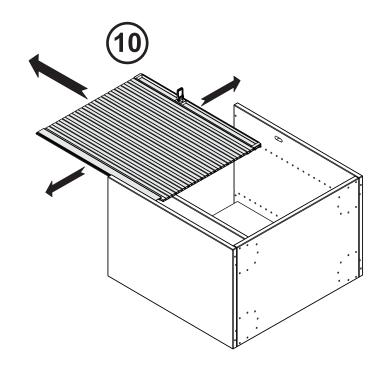

- 9. Remove carcass top LPL board by Mallet and negative driver.
- 10. Remove Tambour Door (plastic) and separate the Pelmet and Door Handle (aluminum).
- 11. Unscrew two (2) screws (steel) to remove key cylinders.

Bins for components removed		
Polypropene	Steel	Aluminum

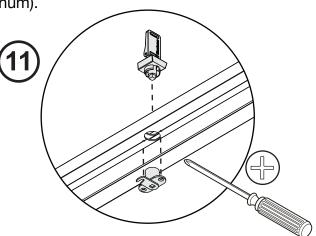

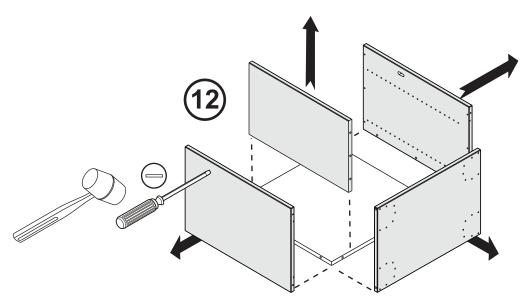

Removal of Carcass board and runner

- 12. Remove carcass LPL boards by Mallet and negative driver.
- 13. Remove two (2) Tambour door runner on the top and bottom (plastic) by Hammer and negative driver.

Bins for components removed	
Polypropene	Scrap
	LPL Boards

