


Jacket™

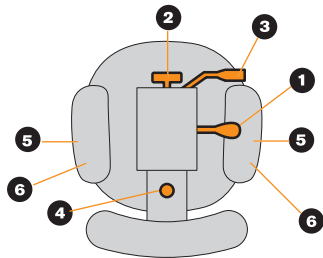

1 Pneumatic seat height

To raise chair, lift body weight up and pull lever up. To lower chair, remain seated and pull lever up.

2 Tilt tension

To decrease tension, turn counterclockwise. To increase tension, turn clockwise.

3 Upright back lock

To lock back in upright position, lean forward and push lever back. To release back lock, lean forward and push lever forward.

4 Seat depth via the back

Loosen bolt, adjust back in or out to desired position, and retighten bolt.

5 Arm height

To raise arm, lift arm to desired height. To lower arm, lift arm to its highest position and then lower to bottom.

6 Maintenance arm width

Loosen screws under arm bracket, adjust arm in or out, tighten screws.

turnstone®
Jacket™

www.turnstonefurniture.com

turnstone
A Steelcase Company