




- ① Insert Patch Pin to the Frame.

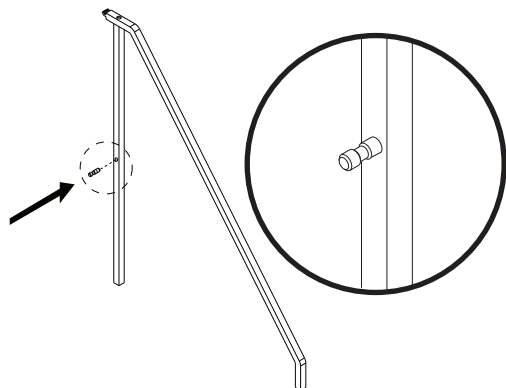


- ② Insert the set screw to the bar and partially tighten it.

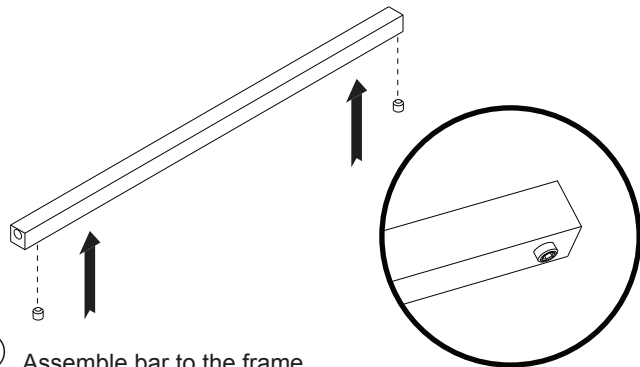


- ③ Assemble bar to the frame.

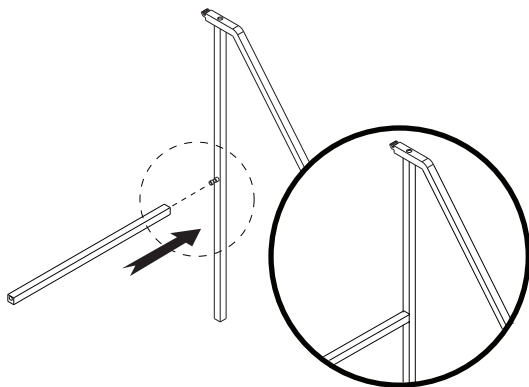


- ④ Fully tighten set screw to match the bar and frame.

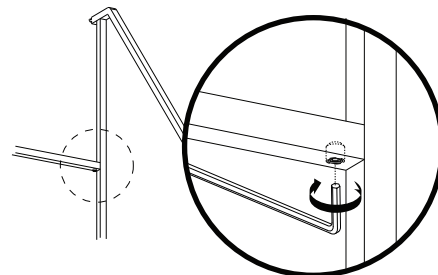


- ⑤ Put spacers on the beam.

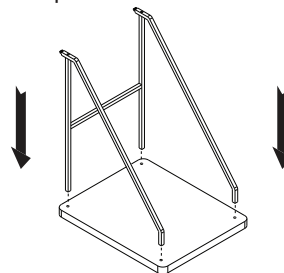



- ⑥ Assemble bar to the frame.

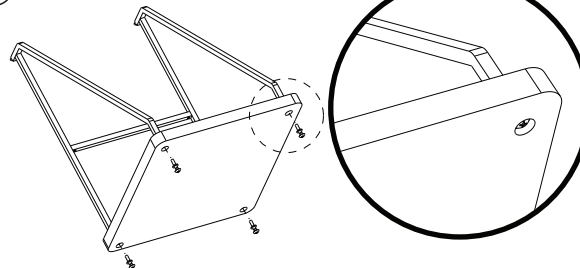


- ⑦ Hook onto the shelf on FE-3 Panel / Screen at desired position.

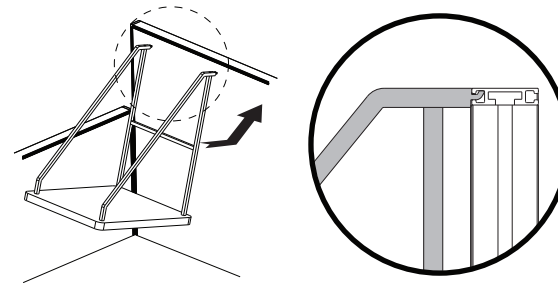

Required Tools

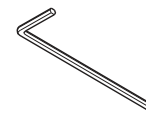

Allen Key

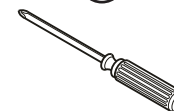

Plus Driver