




FE-3 to FE-A Post Connector - 1

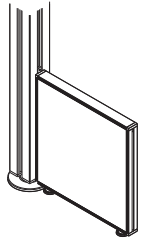


- ① Rotate lower Connector Parts in a line.

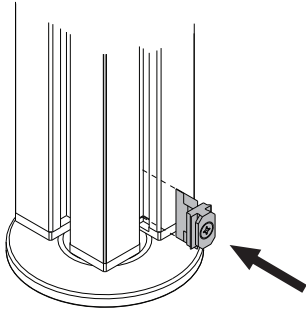


- ② Insert lower Connector to Post.

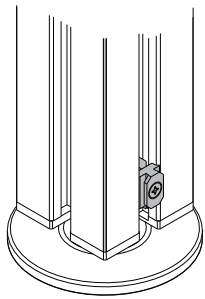


- ③ Tighten the screw in order to rotate & lock it to the Post.

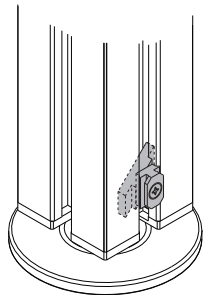


- ④ Slide the Panel from the top.

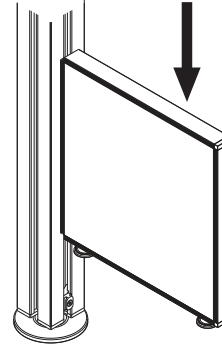


- ⑤ Slide the panel down to the Post until it touches the floor .

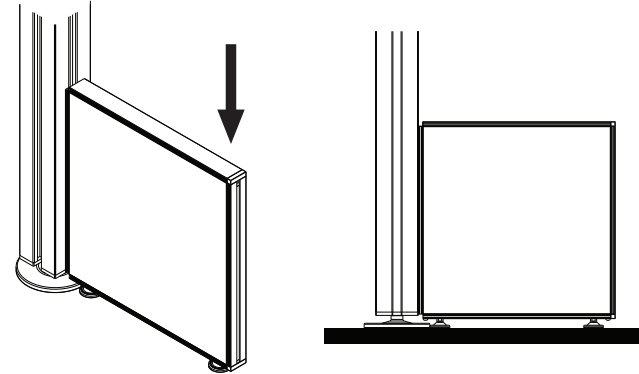

- ⑥ Rotate upper Connector parts in a line.

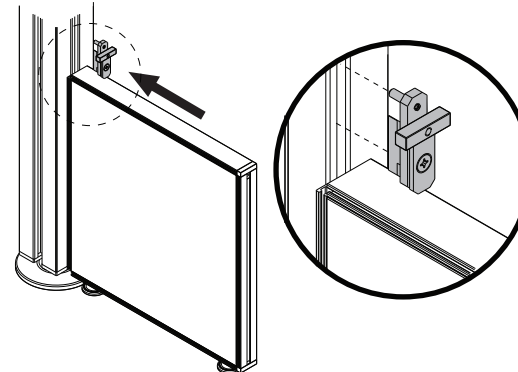


Required Tools

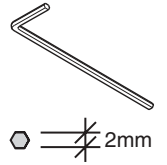


2mm


Allen Key

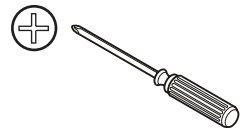


Plus driver

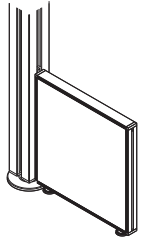


- ⑦ Insert Upper Connector to the Post.

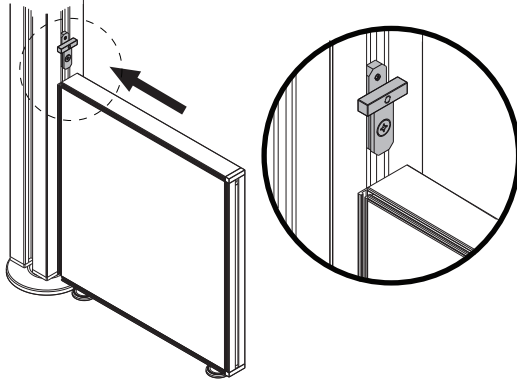


- ⑧ Tighten the screw in order to rotate and lock it to the Post.

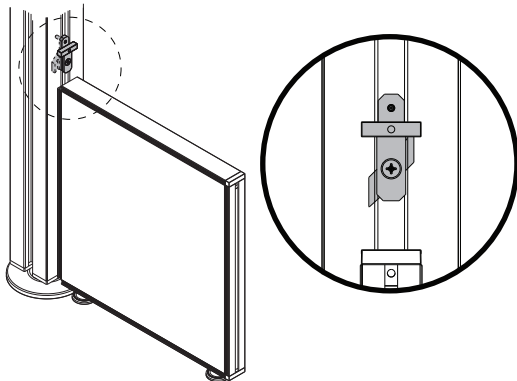



- ⑨ Slide the upper Connector from the top.

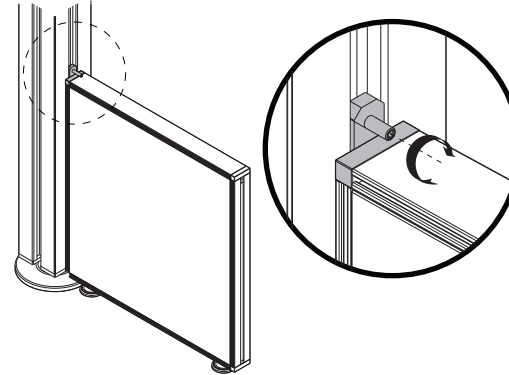


- ⑩ Tighten the set screw until hit the Post to secure the Panel.

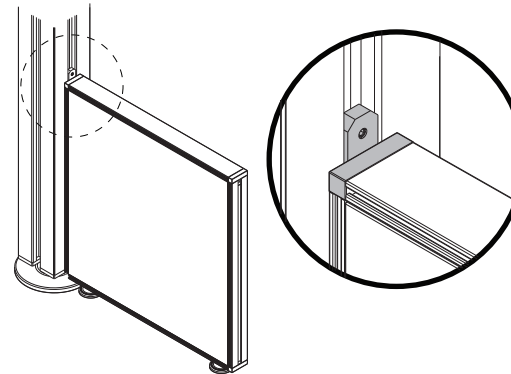

Required Tools

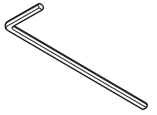

Allen Key

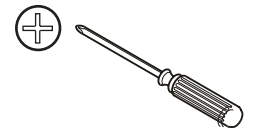

Plus driver