
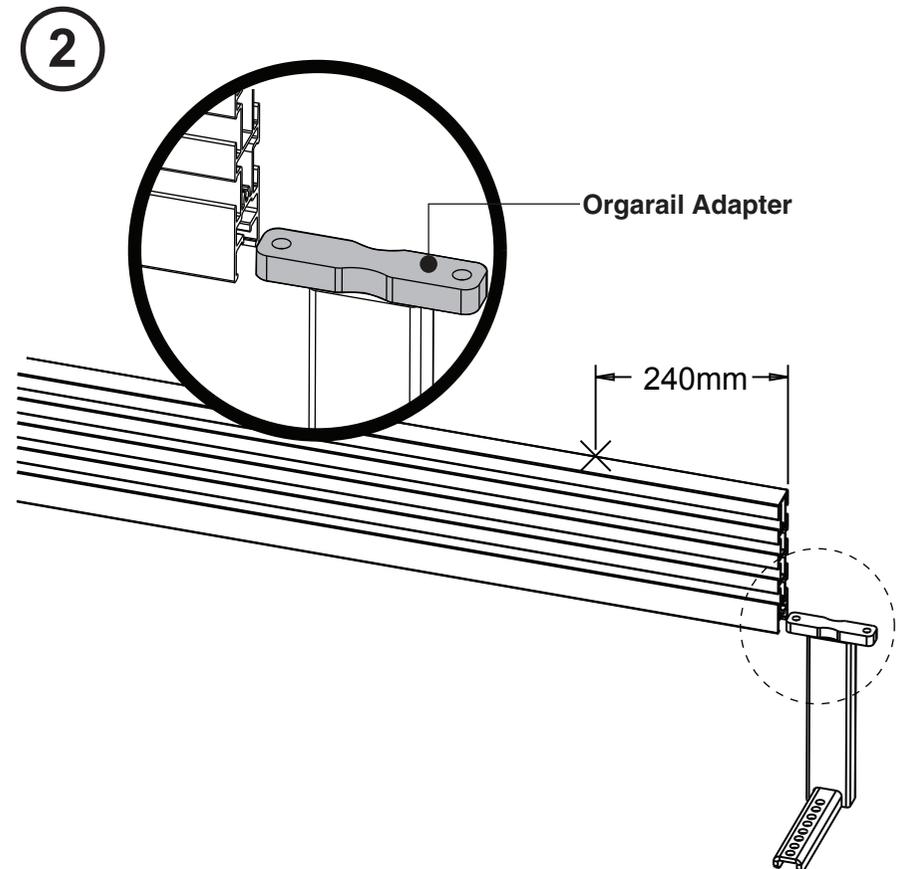



Organization Rail

1. Slide in Pressure Plate to the second slot of the Organization Rail until 240mm from the edge.
2. Slide in Orgarail Adapter to the first slot of the Organization Rail until 240mm from the edge.

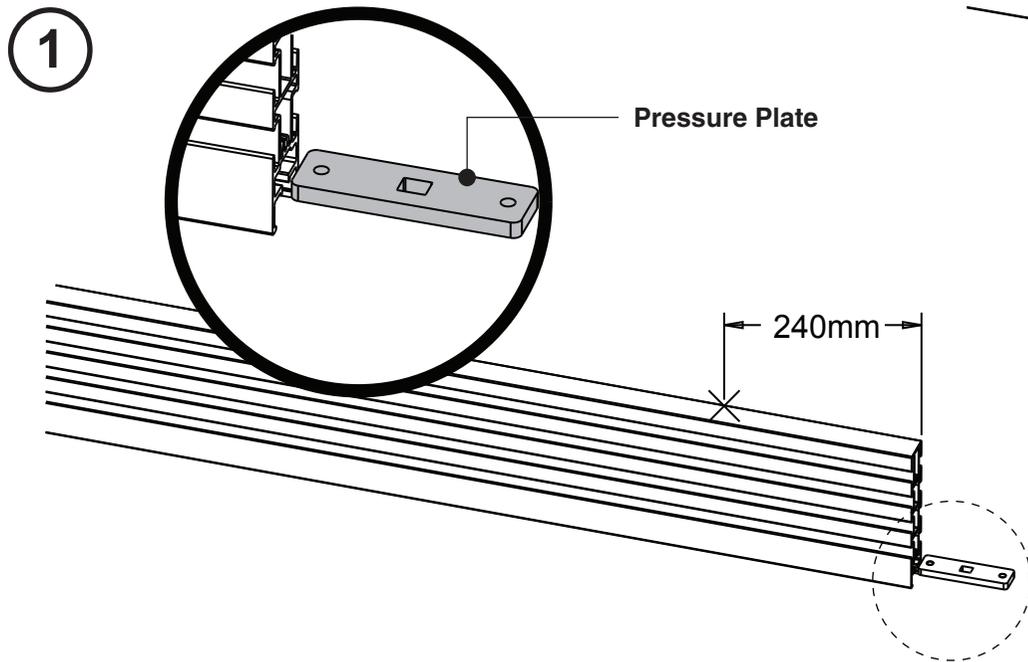

Organization Rail


- 3. Secure Orgarail Adapter to Pressure Plate with M6 Bolts at 240mm from the organization Rail edge.
- 4. Repeat step 1 to 3 to install another Orgarail Adapter.

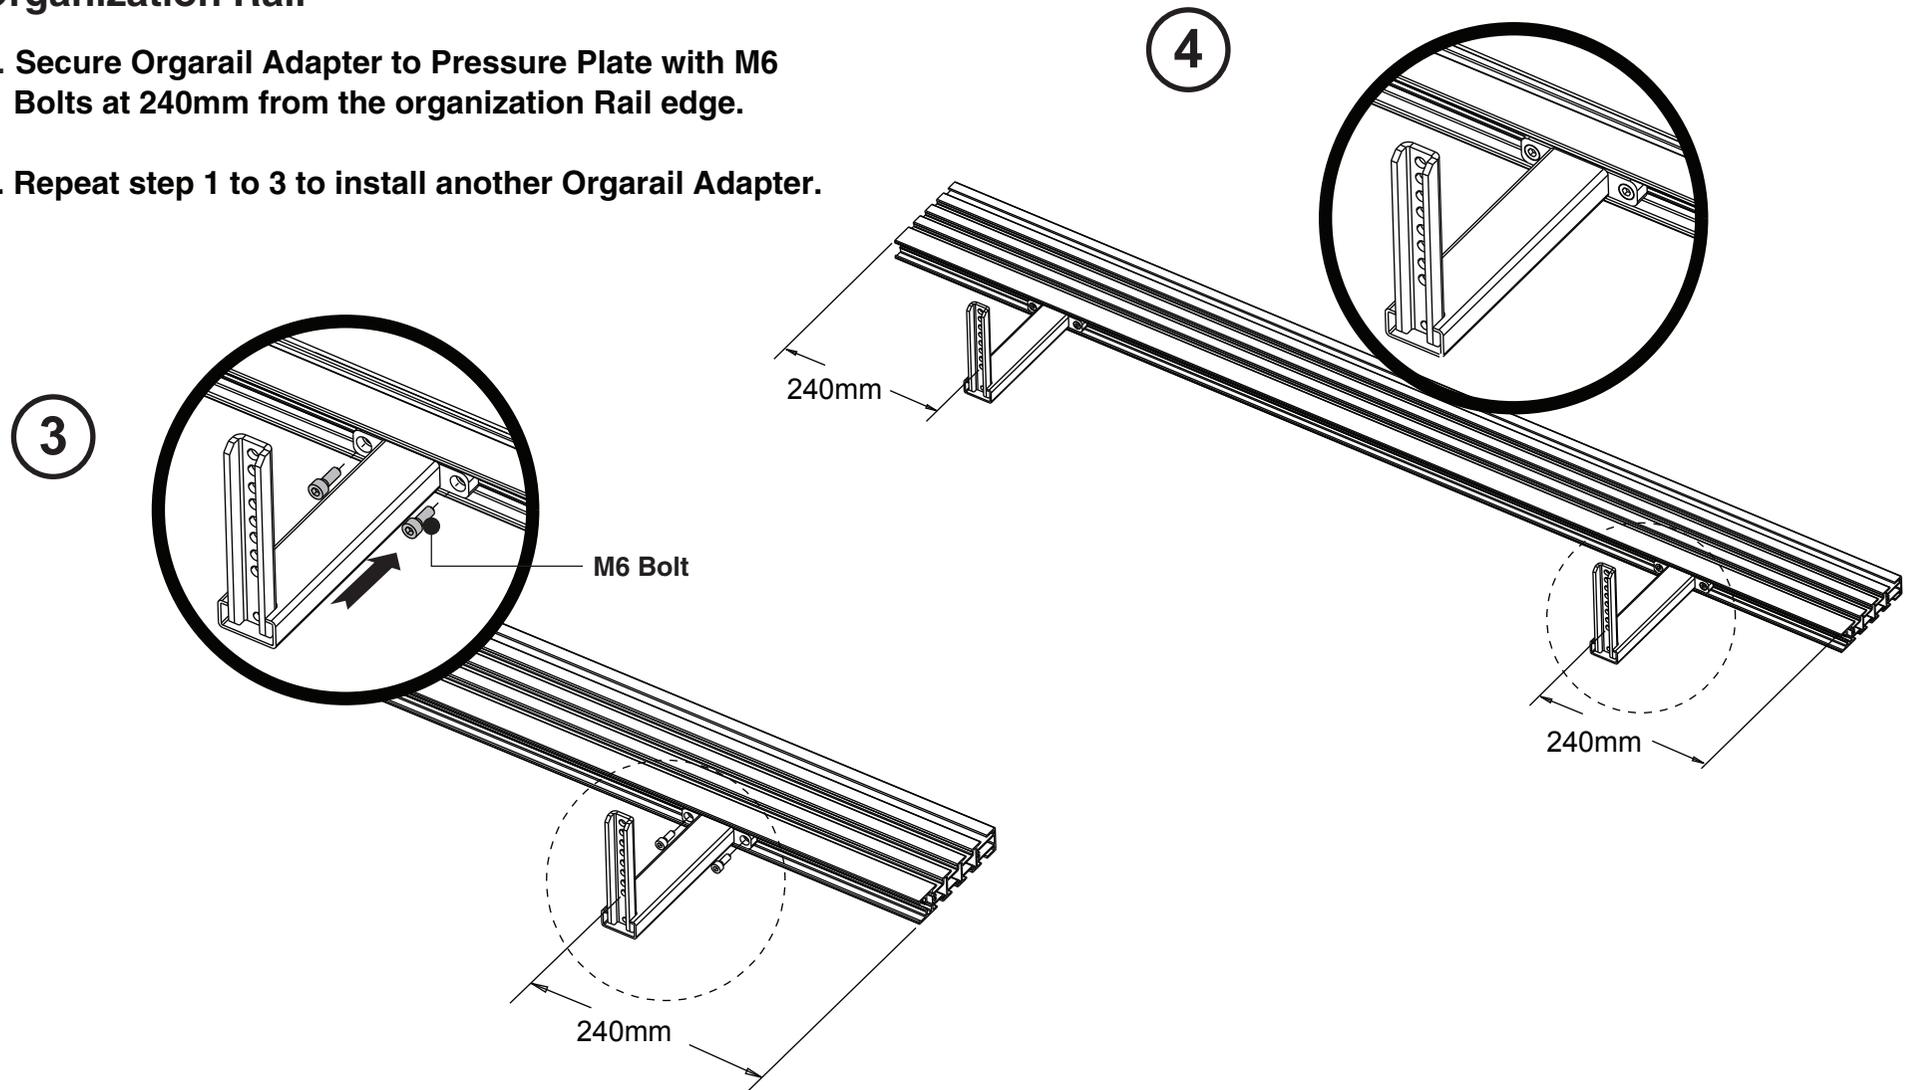




Organization Rail

5. Close Orgarail Sides opening with Orgarail Covers.

6. Align Kragram to Orgarail Adapter.

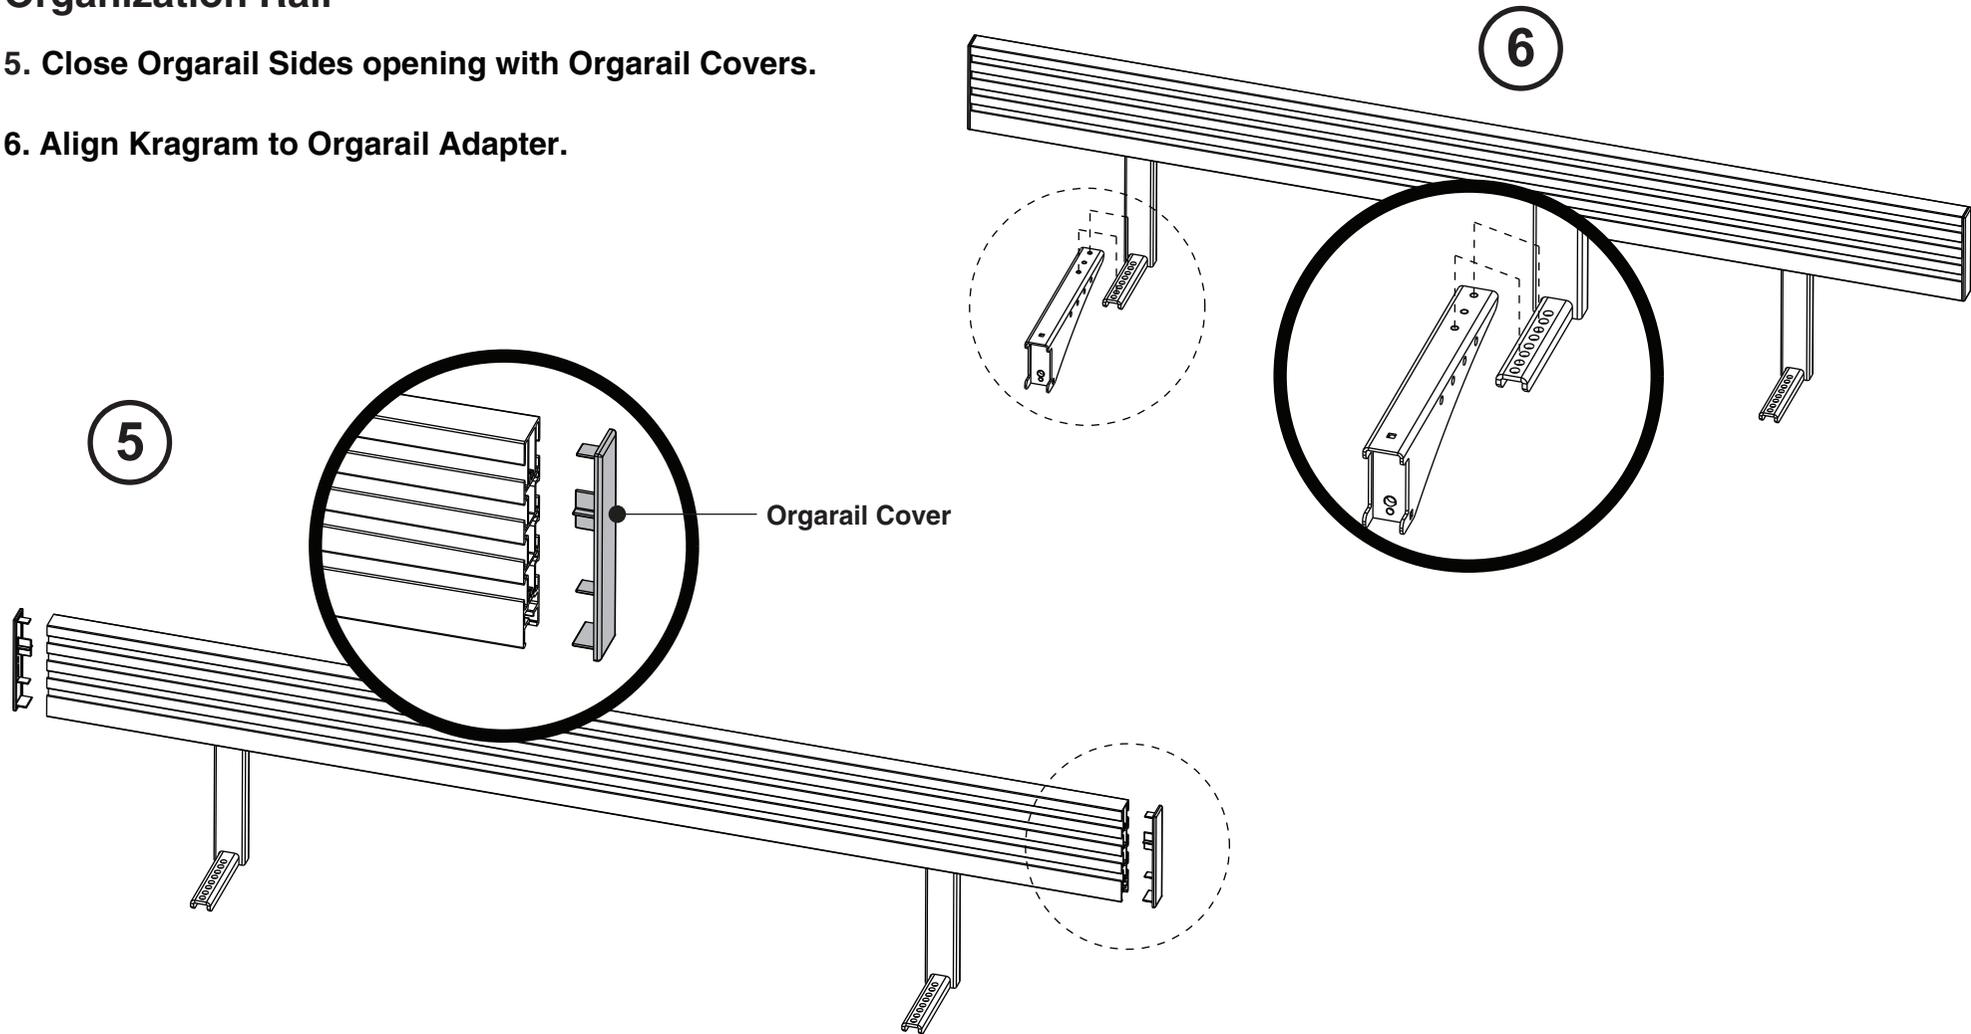


Organization Rail Configurations

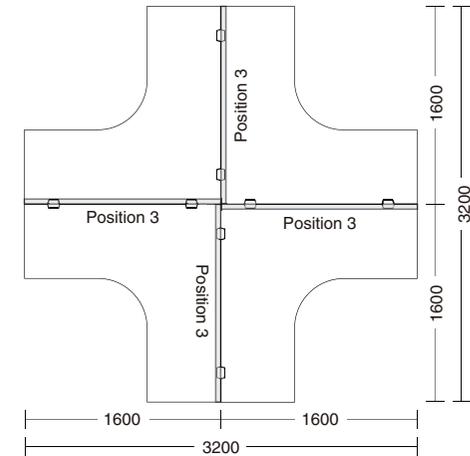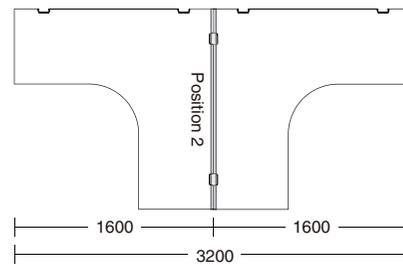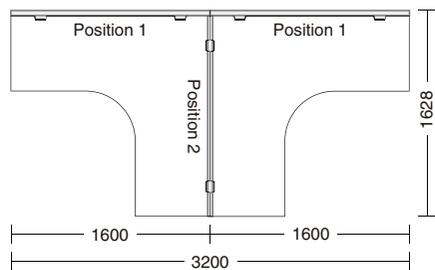


Position 1

Behind desk trailing edge
 Not required cut-out option

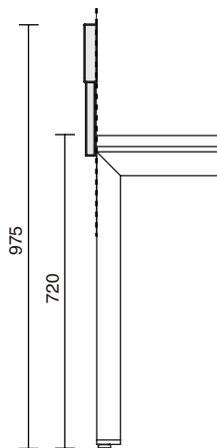



Position 2

Centered desk trailing edge
 Required cut-out option

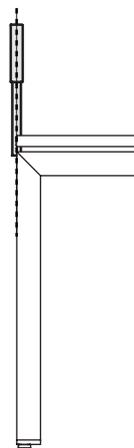



Position 3

Inside desk trailing edge
 Required cut-out option

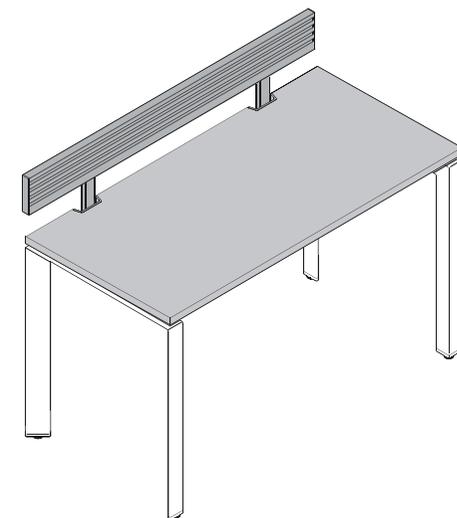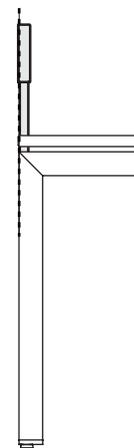

Organization Rail

- 7. Secure Kragram to Adapter using M6 Bolts.
Repeat step 6 for another Kragram.
- 8. Attach Orgarail assembly to Rectangular Tube of the desk understructure.

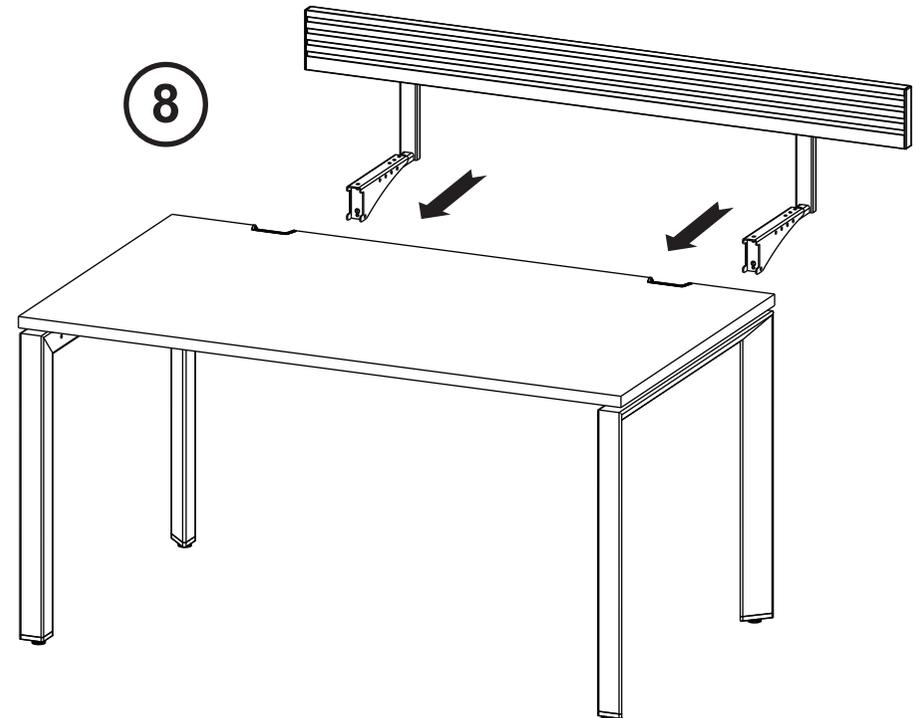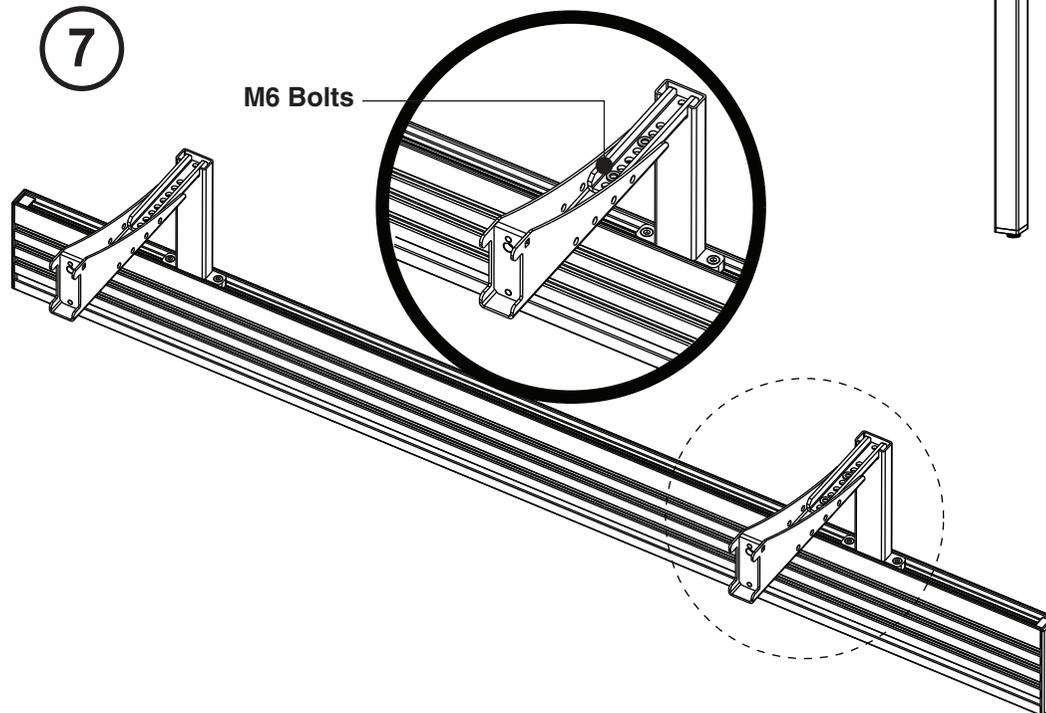

Organization Rail

9. Install Clamp Plate from opposite side of the Rectangular Tube from Kragram and secure with M6 Bolts.
Repeat the same for another Clamp Plate.

