


竹子沙发

Bamboo sofa






grado*

www.gradodesign.com

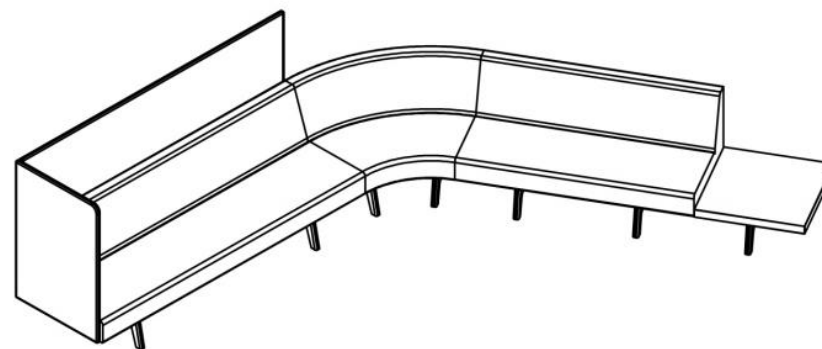


grado*

www.gradodesign.com

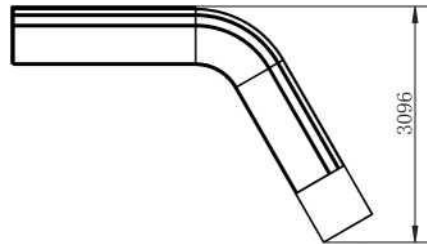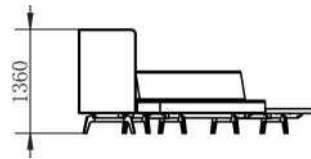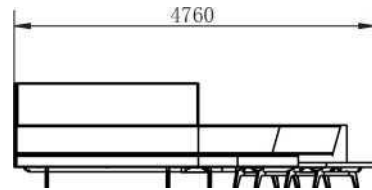


A.将脚架与三人位横梁用 M8 的平头螺丝连接
A.Connect the base to the beam of bamboo sofa/ three-seats with the flat head screws of M8

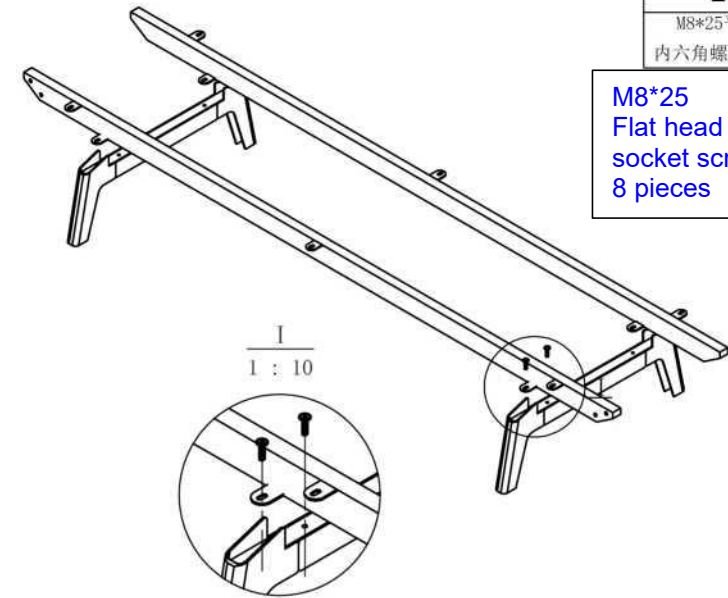

M8*25
Flat head hexagon
socket screw
8 pieces

三人位底部钢架安装完成效果图

Finished effect drawing of the installation of the steel frame at the bottom of the bamboo sofa/three seats

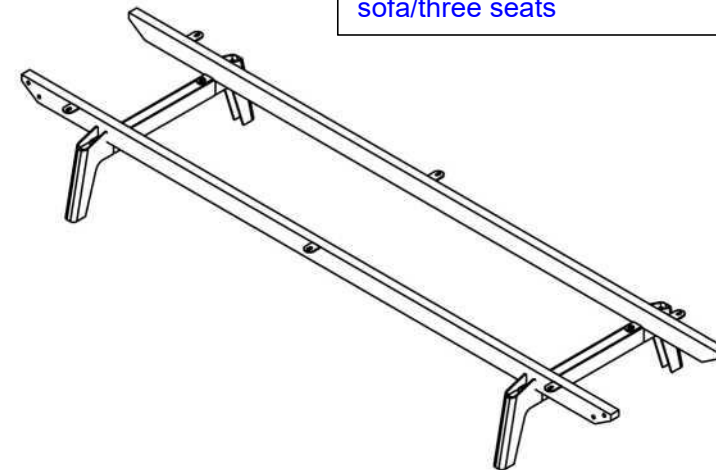


grado*

B. 将三人位软包与三人位底部钢架用M6沉头螺丝连接

B. Connect the upholstery and the bottom steel frame of the bamboo sofa/three seats with M6 countersunk head screws


II
1 : 10

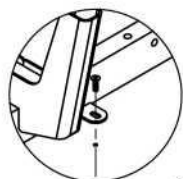

M6*20
Countersunk
head hexagon
socket screw
4 pieces

Finished effect drawing of the installation of the bamboo sofa/three seats

三人位安装完成效果图

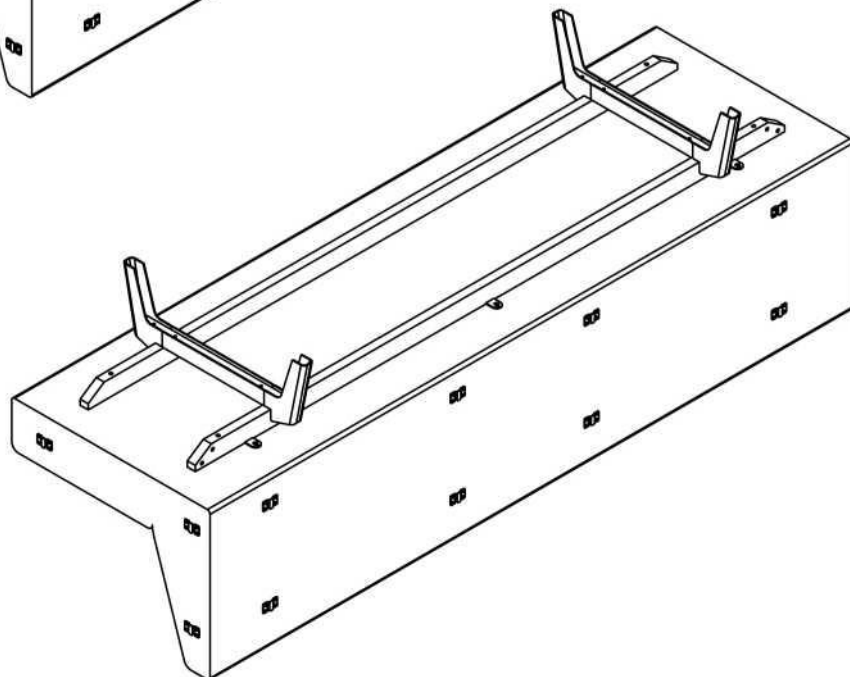


grado*

C. 将脚架与二人位横梁用 M8 的平头螺丝连接

C. Connect the base to the beam of bamboo sofa/ double-seats with the flat head screws of M8




M8*25
Flat head
hexagon socket
screw
8 pieces

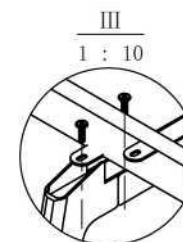



Finished effect drawing of the installation of the steel frame at the bottom of the bamboo sofa/double seats

二人位底部钢架安装完成效果图

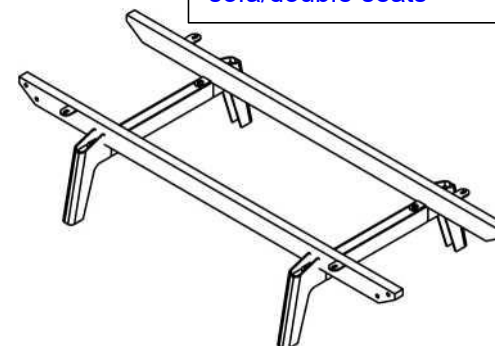


D. 将二人位软包与二人位底部钢架用 M6 沉头螺丝连接
D.Connect the upholstery and the bottom steel frame of the bamboo sofa/ double seats with M6 countersunk head screws

grado*

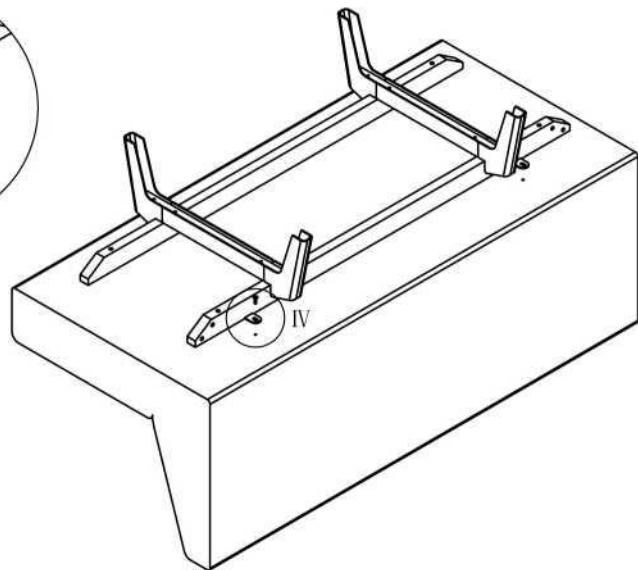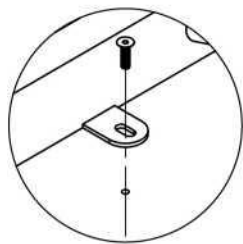

二人位安装完成效果图

Finished effect drawing of the installation of the bamboo sofa/double seats

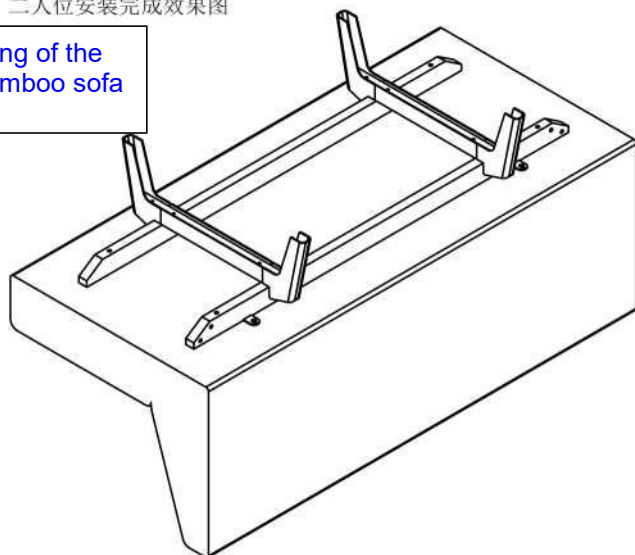

E.Connect the base to the beam of bamboo sofa/ middle-seat with the flat head screws of M8



grado*



M8*25 平头 内六角螺丝*8 颗

E.将脚架与中间位横梁用 M8 的平头螺丝连接


M6*20
Countersunk head
hexagon socket
screw
4 pieces

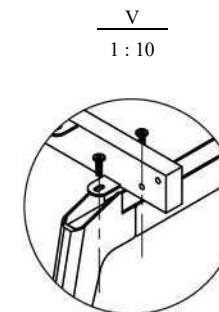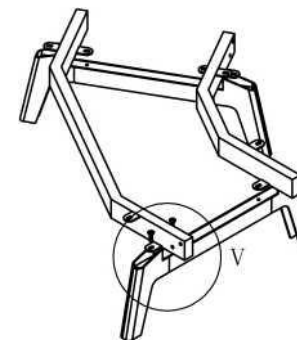

M8*25
Flat head
hexagon socket
screw
8 pieces

中间位底部钢架安装完成效果图


Finished effect drawing of the installation of the steel frame at the bottom of the bamboo sofa/middle seat

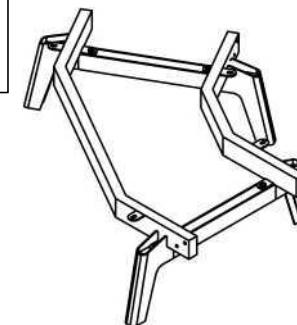

grado*


F.将中间位软包与中间位底部钢架用 M6 沉头螺丝连接

F.Connect the upholstery and the bottom steel frame of the bamboo sofa/ middle seat with M6 countersunk head screws

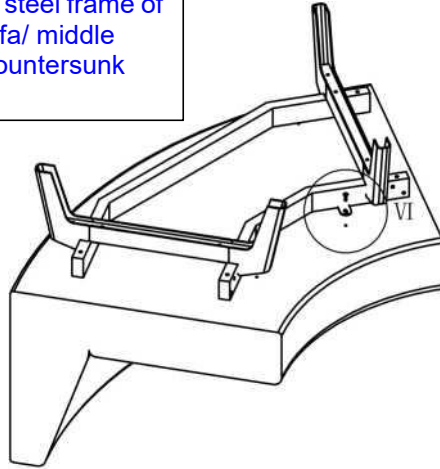

M6*20 沉头
内六角螺丝*4 颗


M6*20
Countersunk
head hexagon
socket screw
4 pieces

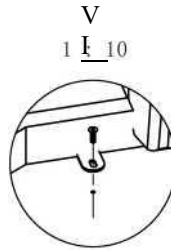

V
1 : 10


中间位安装完成效果图

Finished effect drawing of the installation of the bamboo sofa/middle seat

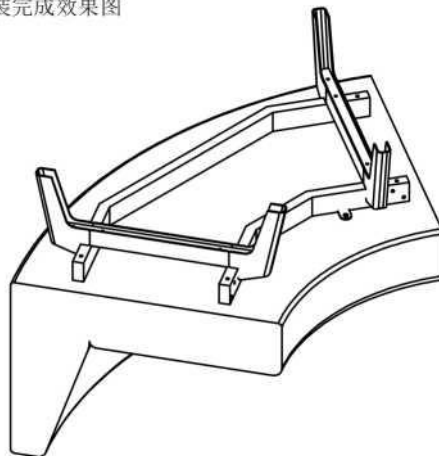

G.将脚架与茶几位横梁用 M8 的平头螺丝连接

G.Connect the base to the beam of bamboo sofa/ coffee table with the flat head screws of M8

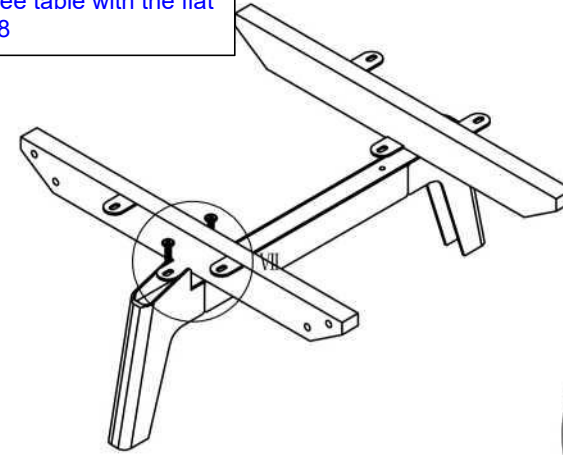


grada



M8*25 平头
内六角螺丝*8 颗

M8*25
Flat head hexagon
socket screw
8 pieces


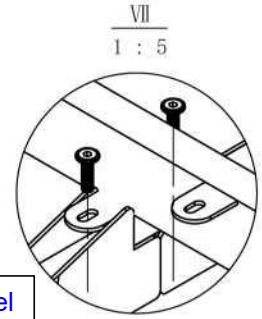


VII
1 : 5

H.Connect the tabletop to the steel frame of coffee table with the flat head screws of M8

VIII
1 : 5

H. 将茶几位面板与茶几位底部钢架用M8平头螺丝连接

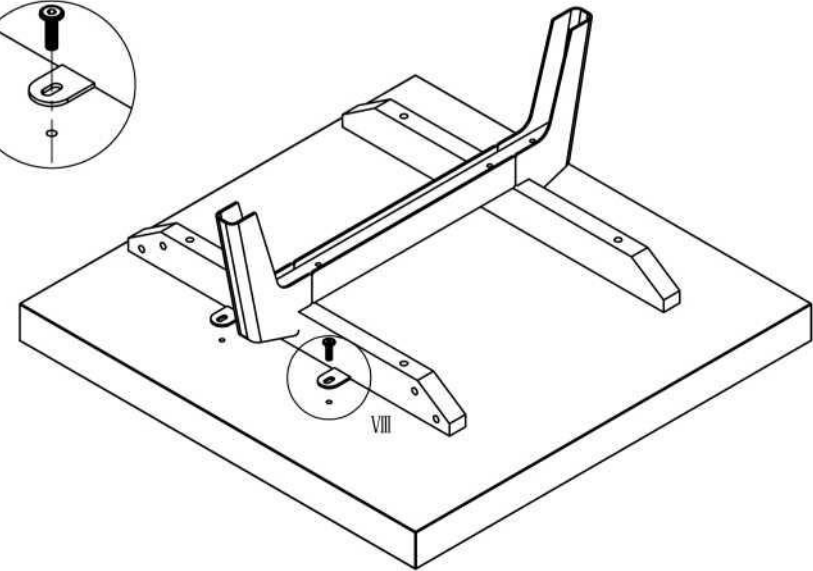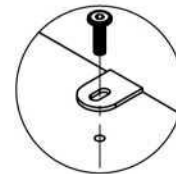



grado

I. 将三人位、二人位、中间位、茶几位用 M8 平头螺丝和连接件连接

I. Connect the three-seats, double-seats, middle-seat and coffee table of the bamboo sofa with M8 flat head screws




M8*25
Flat head hexagon
socket screw
36 pieces

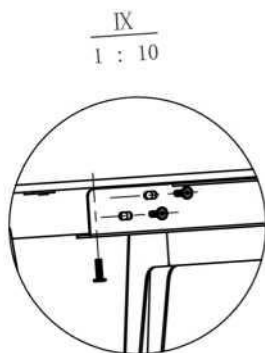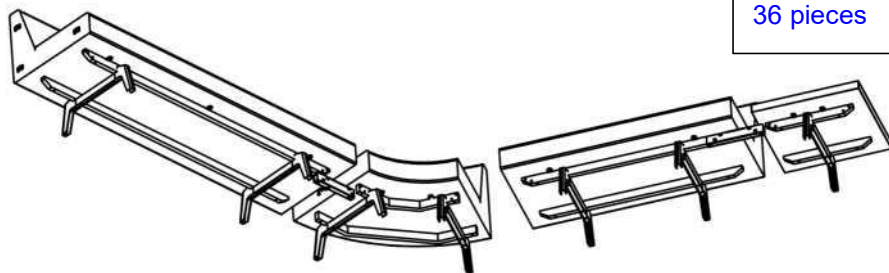


Finished effect drawing of the
installation of the bamboo
sofa/middle seat

中间位安装完成效果图

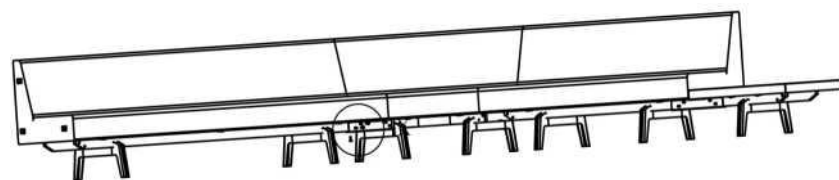


J. 将右侧屏风和后屏风卡在沙发软体的连接件上' 屏风之间相互卡紧

J. Clamp the right and back screens onto the
connectors of the sofa upholstery

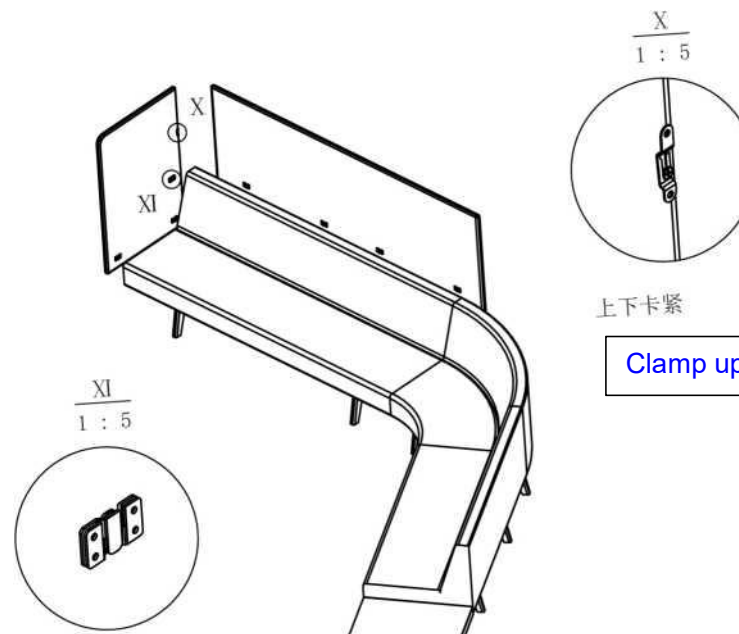

Clamp up and down

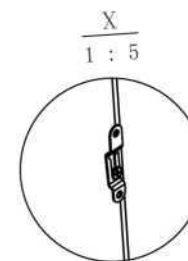

上下卡紧

Clamp up and down

Finished effect drawing of the
installation of the bamboo sofa

产品安装完成最终效果图

