coalesse®

Bumper Replacement

- **1.** Carefully turn chair upside-down onto rug or other soft, clean surface.
- **2.** Peel worn bumper(s) off of leg support(s). **Note:** To prevent damage to finish, do not use a sharp instrument.
- **3.** Using a soft, dry cloth, clean surface(s) of any adhesive residue using a citrus cleaner. With a clean cloth, wipe surface with rubbing alcohol and allow to dry.


Note: To prevent damage to finish, do not use abrasive cleaners, harsh chemicals or vinegar.

- **4.** Select replacement bumper per illustration.
- **5.** Peel backing off bumper and place adhesive side of bumper on top of leg support, orienting as shown. Press bumper outward and downward, pushing out any air bubbles.
- **6.** Repeat steps 4 and 5 for additional bumpers, as necessary.
- 7. Carefully turn chair rightside-up.

If you have a problem, question, or request, call your local dealer, or Coalesse at 1.800.627.6770 Or visit our website: www.coalesse.com

© 2015 Coalesse San Francisco, California U.S.A. Printed in U.S.A.

<5_MY Chair - Customer Service Parts</pre>

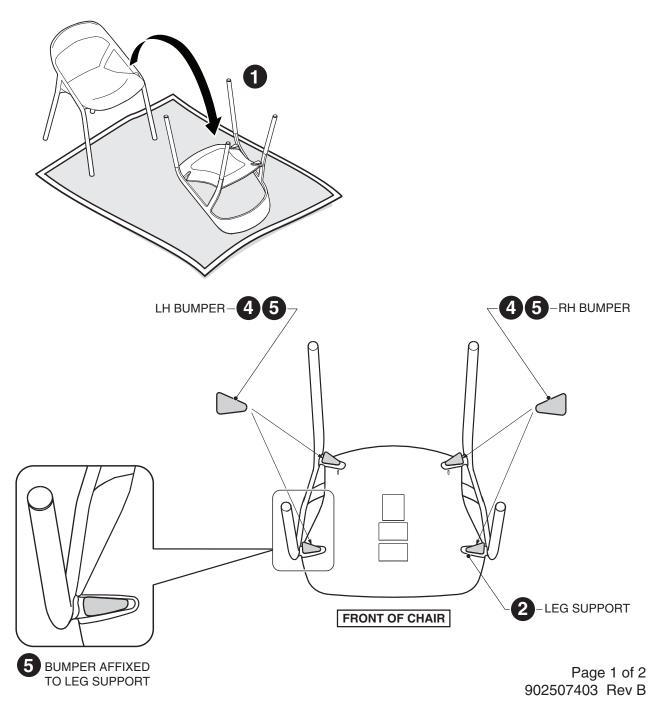

coalesse®

Glide Replacement

TOOLS REQUIRED:

- Slotted (flat blade) screwdriver
- 10" end-cutting nippers
- Rubber mallet
- Drill and 7/16" diameter drill bit
- **1.** Carefully turn chair upside-down onto rug or other soft, clean surface.
- **2.** To protect chair leg finish, pull out glide by hand, if possible.
- **3.** If you are unable to remove glide by hand, insert screwdriver between glide foot and chair leg and rotate screwdriver 90° to pry glide foot away from leg.
- **4.** Using nippers, grasp glide firmly between glide foot and chair leg.
- **5.** Holding chair with hand, pull out glide with nippers.

Note: If glide foot seperates from glide body during this procedure, drill out glide body using 7/16" diameter drill bit. Carefully drill through center of glide body about 1-1/4" deep. With drill power off, pull straight up until entire glide is removed.

6. Insert new glide into hole in bottom of leg, then press it into leg until glide foot is flush against bottom of leg.

Note: Use a rubber mallet if glide cannot be installed by hand.

7. When glide replacement is complete, carefully turn chair rightside-up.

