

### media:scape Lounge - Canopy and Ledge

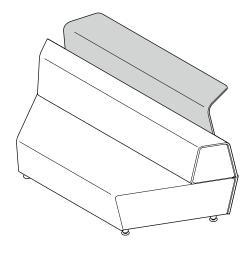


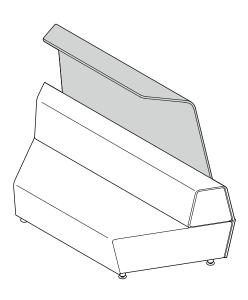

Canopy




**CAUTION:** Install the necessary counterweight plates as per pages 2 & 3. Failure to follow these instructions could result in the lounge tipping over and causing personal injuries.

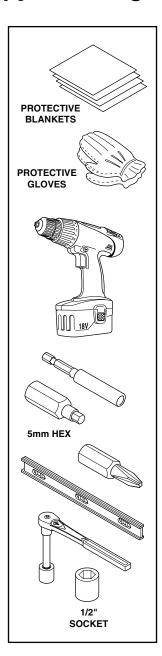

January 2014 Page 1 of 12


### media:scape Lounge - Canopy and Ledge

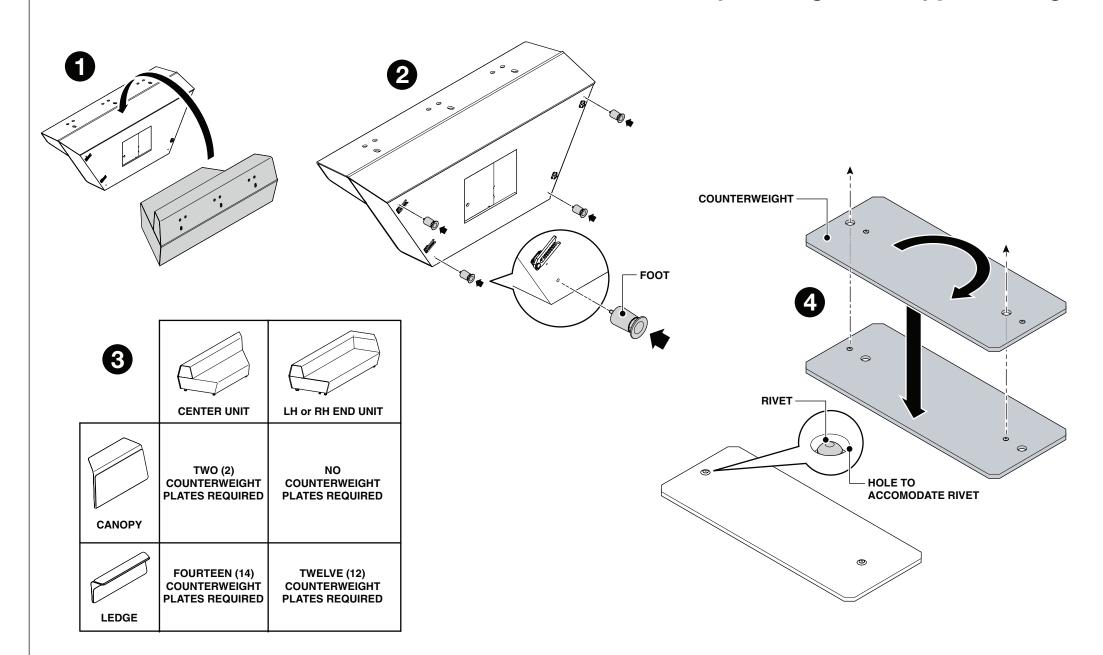


January 2014 Page 2 of 12

### media:scape Lounge - Canopy and Ledge

### Installing Two (2) Counterweights for Canopy

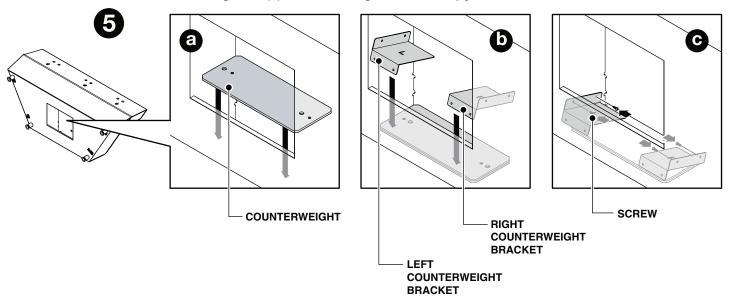


### Installing Twelve (12) or Fourteen (14) Counterweights for Ledge

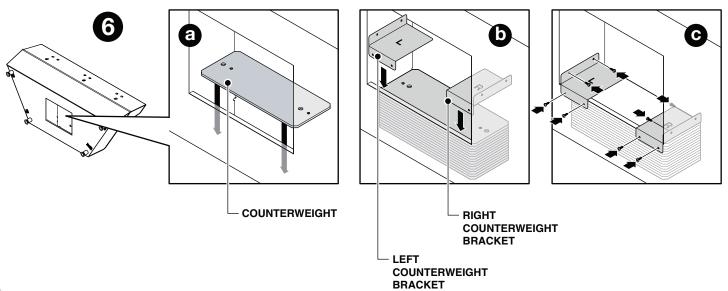

January 2014


## Steelcase® media:scape Lounge - Canopy and Ledge SIDE VIEW Ledge **NOTE:** This installation requires two (2) installers. 2 1/2" GAP 0 Ledge TUBE SPACER 5/16-18 X 3" **WASHER HEX BOLT** 8 .. - 1" LONG SPACER 3 **SIDE VIEW INSTALL ADJUSTMENT BOLT FLUSH WITH SIDE** OF PANEL **ADJUSTMENT BOLT** 1-1/8" LONG Page 4 of 12 January 2014

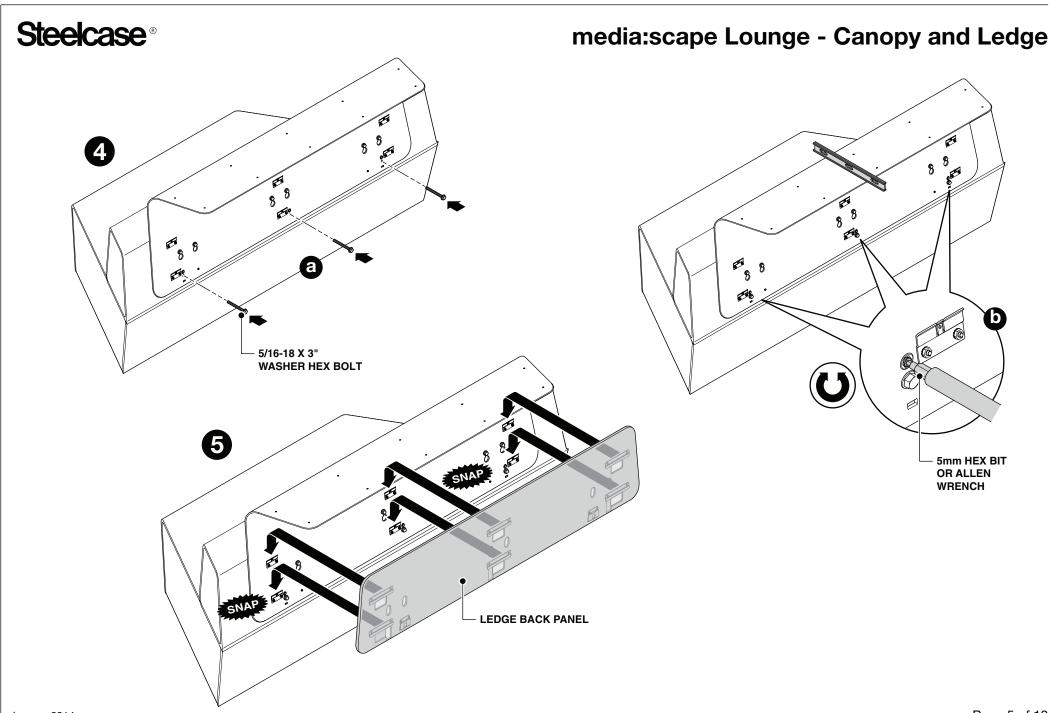

January 2014 Page 5 of 12


## media:scape Lounge - Canopy and Ledge

### Ledge Worksurface (Optional)

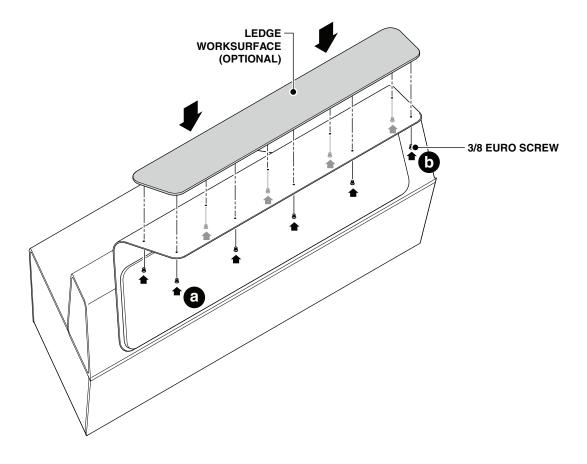



**NOTE:** Do not over-tighten euro screws.


January 2014 Page 6 of 12

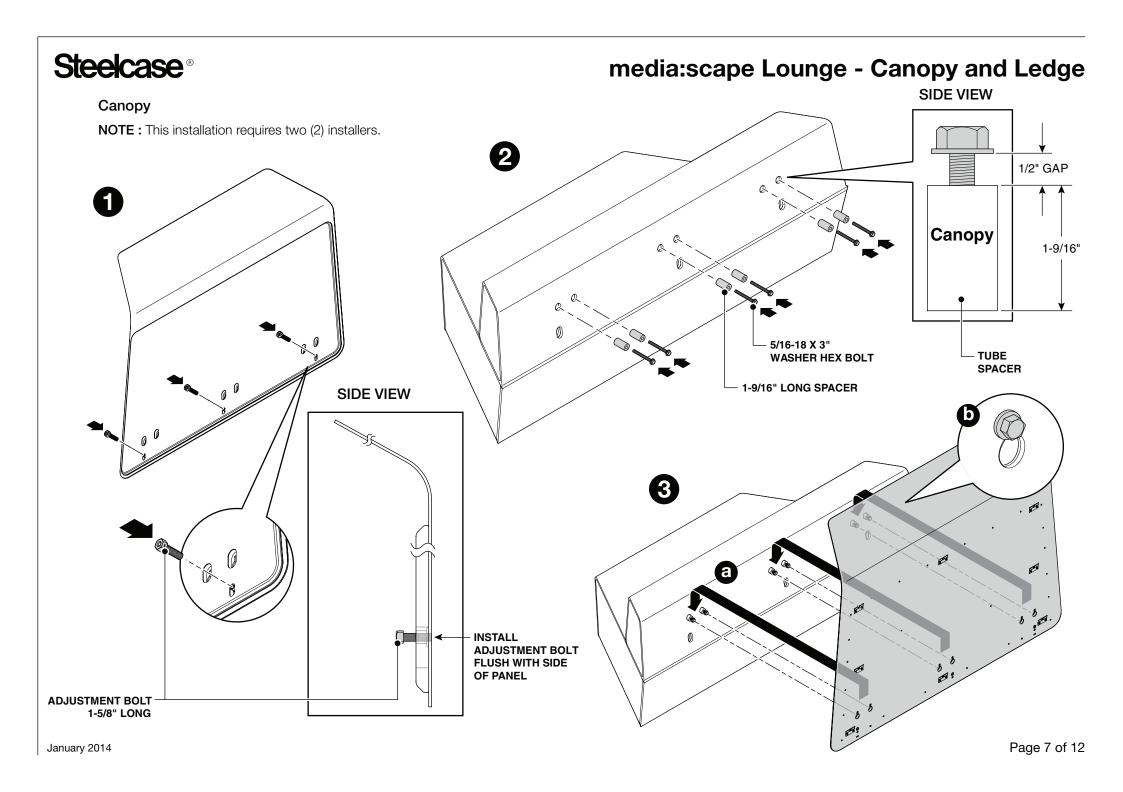

# Steelcase® media:scape Lounge - Canopy and Ledge

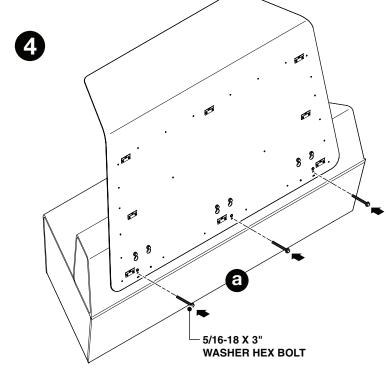


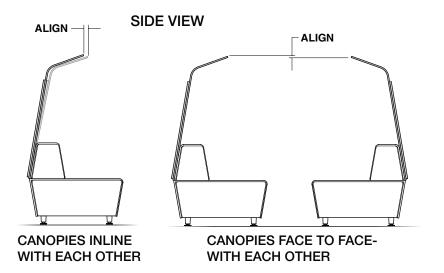

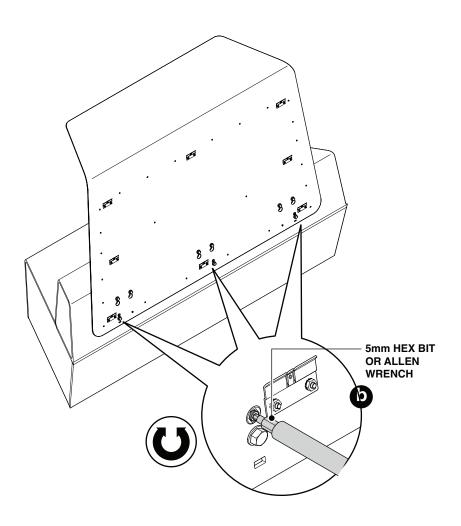


January 2014 Page 8 of 12

# media:scape Lounge - Canopy and Ledge

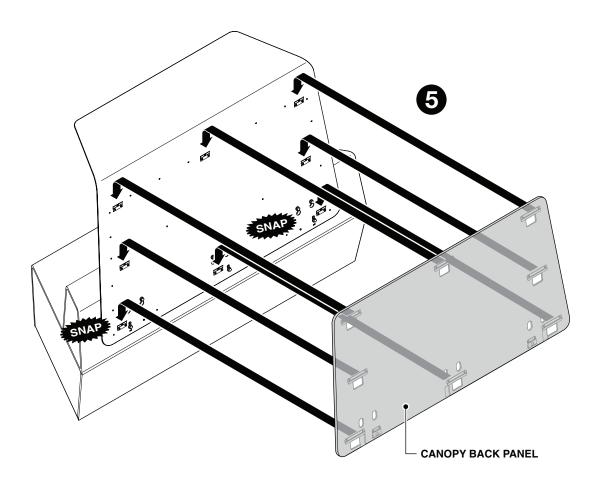

January 2014 Page 9 of 12

## media:scape Lounge - Canopy and Ledge

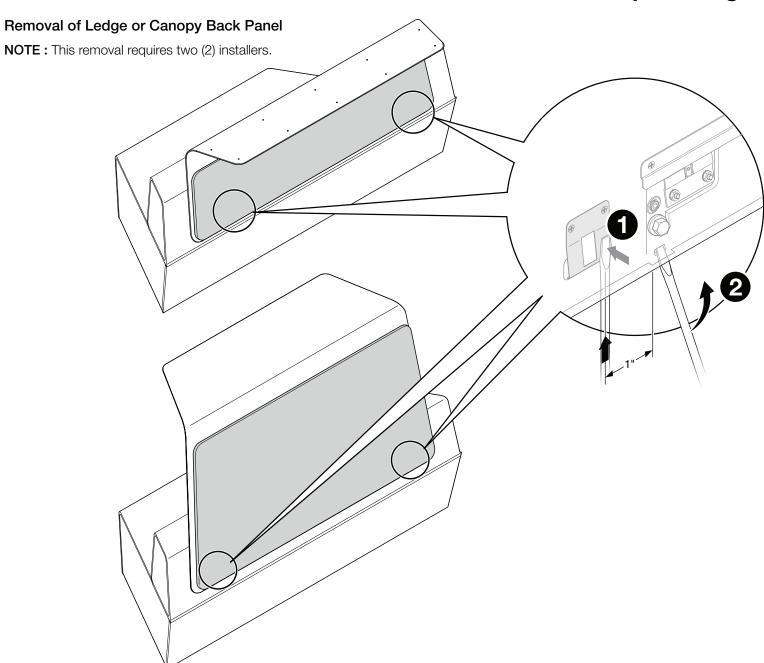


January 2014 Page 10 of 12

### media:scape Lounge - Canopy and Ledge


#### Modification to an existing lounge

**NOTE:** You will need to cut the holes in the fabric. We recommend a hole punch tool taht is 1" diameter. (McMaster -Carr, Osborne, etc.)

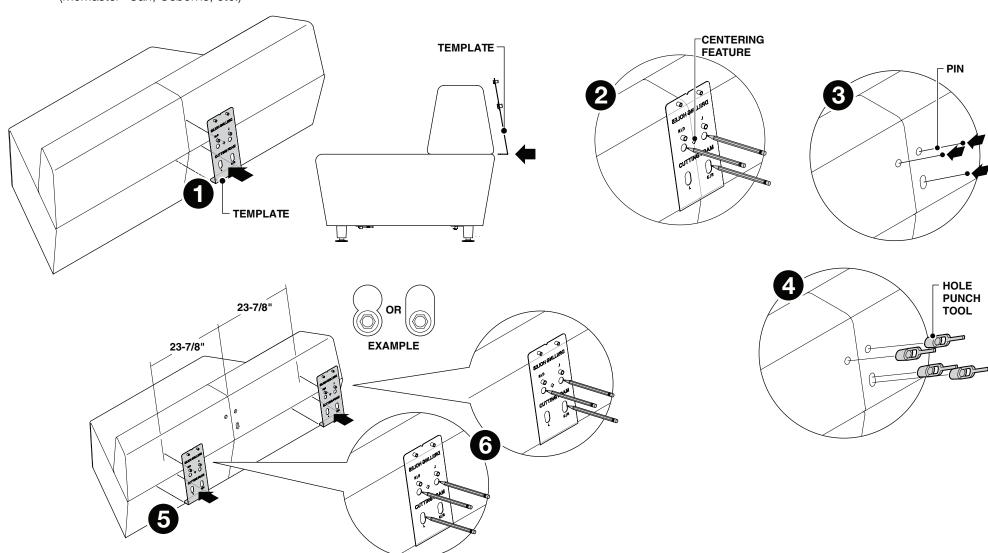

January 2014 Page 11 of 12

### media:scape Lounge - Canopy and Ledge

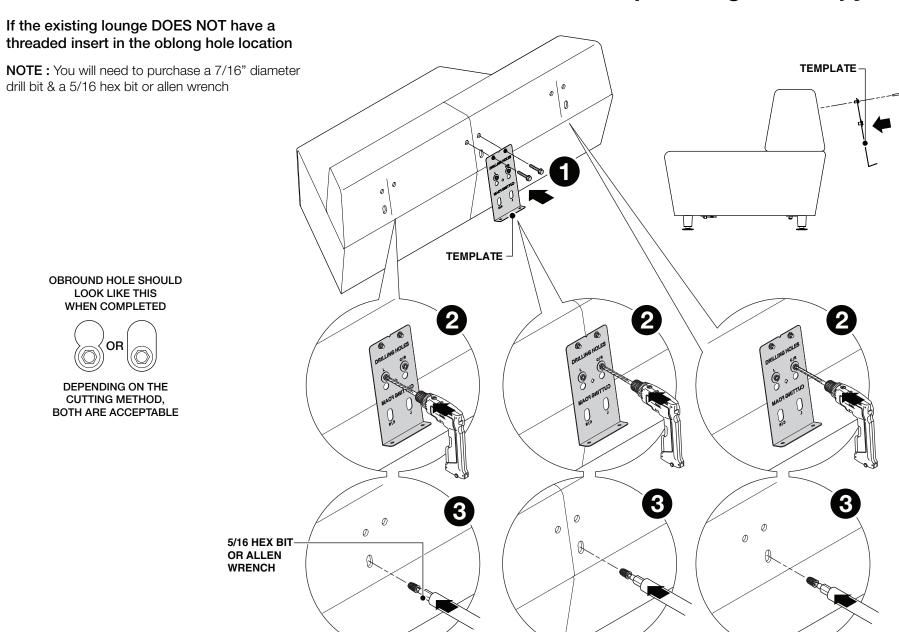

January 2014 Page 12 of 12