


Apt-Ex Sled base (Updated on March 2008)

組立て説明書 Assembling Instructions

APT-6302
Mid Back
Sled Base

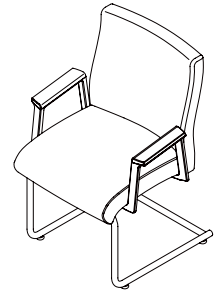

包装内容

本体(肘付き) x1
背 x1
スレッドベース x1

Contents


Seat (with arms) x1
Back x1
Sled base x1

(A) 1/4-20 x 2-3/8" (60mm)
long hex head bolts x4


(B) M8 x 1-1/16" (27mm)
long hex head bolts x4

(C) Spacers x4

必要な工具 Required tool

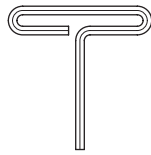


5mm 六角レンチ

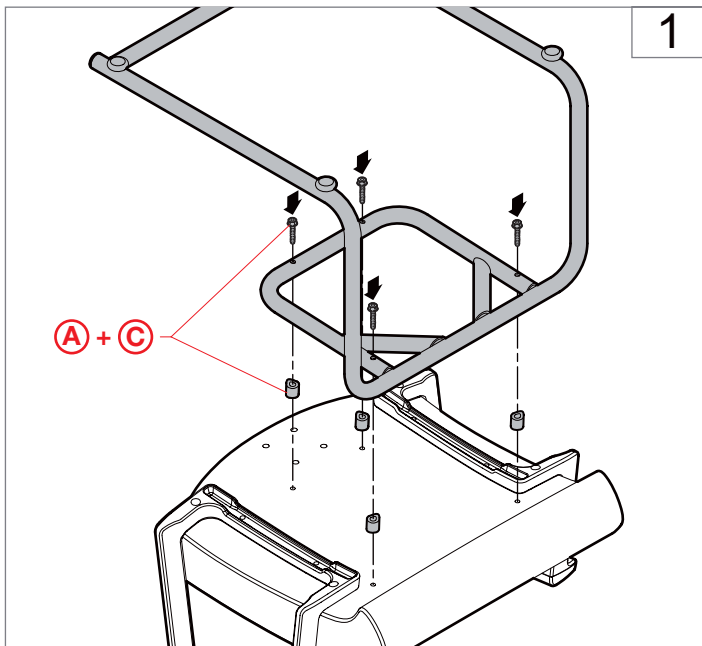

1. Attach sled base to seat

Lay the chair seat on the floor. Taking care to ensure that the seat will not be scratched, cut or stained. Locate the sled base with the four (4) spacers on the bottom of the chair seat and attach using four (4) 1/4-20 x 2-3/8" (60mm) long hex head bolts.

1. スレッドベースを座面につけます
本体を天地逆に床の上に置きます。シートが傷ついたり汚れたりしないように注意してください。
スペーサーを本体とベースの間に挟み、4本の六角ボルト(60mm)で固定します。

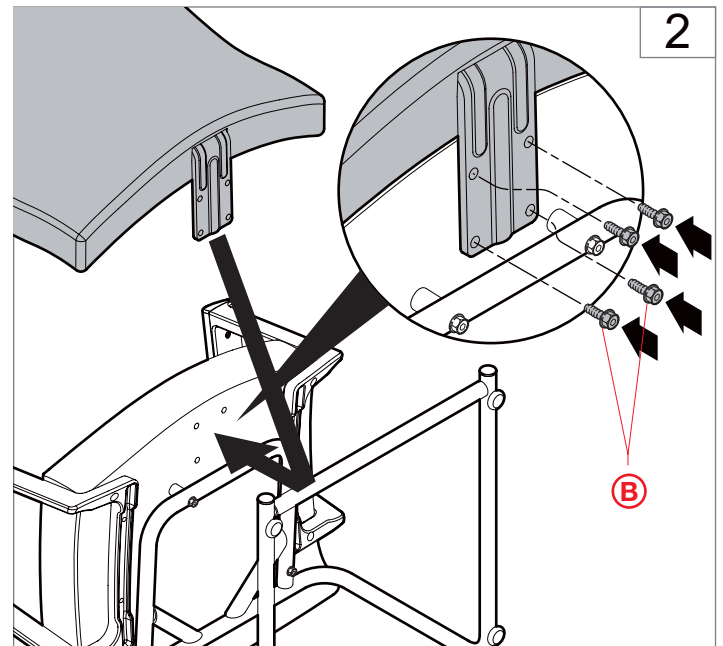

2. Attach back assembly to seat assembly

Place the front of the chair seat assembly on the floor. Taking care to ensure that the seat will not be scratched, cut or stained. Place the back assembly onto the bottom of the seat assembly as shown (2a). Attach using four (4) M8 x 1-1/16" (27mm) long hex head bolts (2b).

2. 背を本体につけます。
本体の前方を下にして床の上に置きます。シートが傷ついたり、汚れたりしないように注意してください。
本体にある穴位置(図を参照)に合わせて、4本の27mm六角ボルトを使って背を本体に固定します。