



Power Driver




Drill Bit



M4 Tap Bit


**Beam**

1. Make a Dia 3 hole at shown. After drilling, use the M4 tapping bit to make a screw thread at the drilled hole.

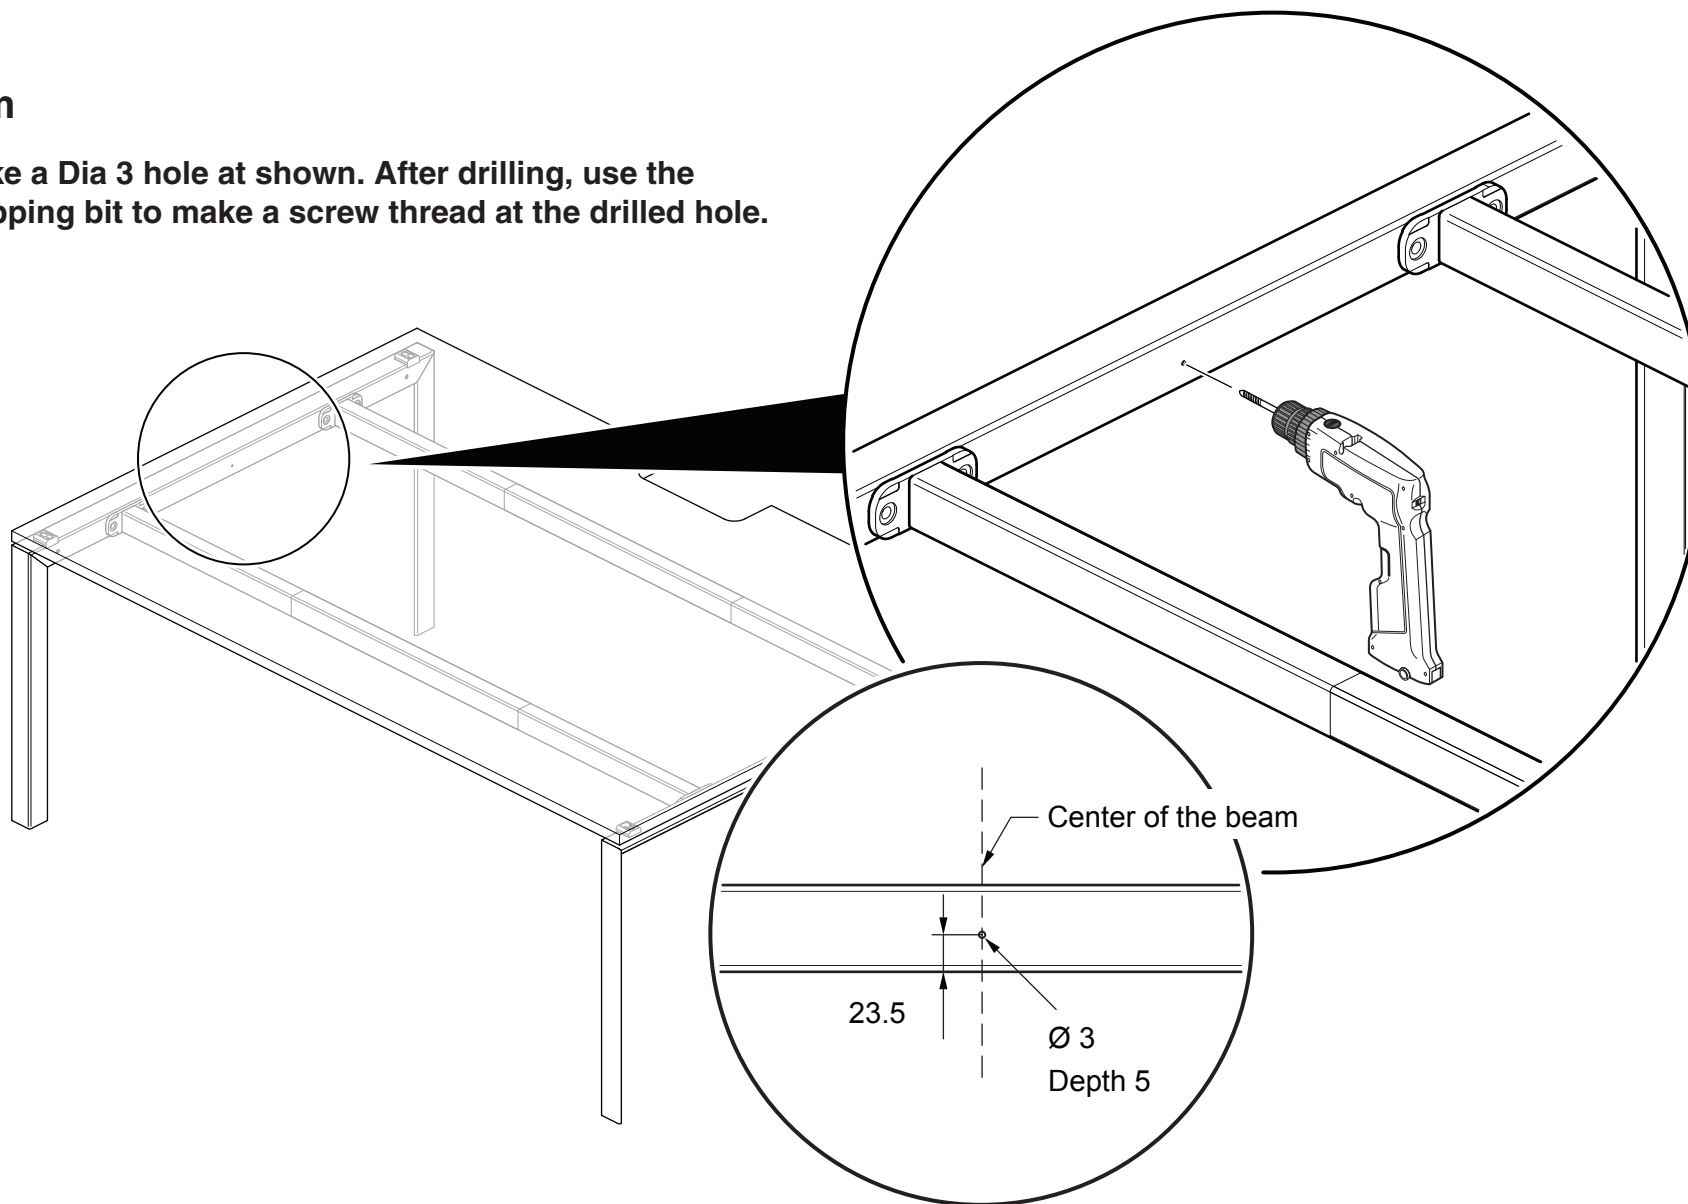

## Center Bracket

2. Screw in the center bracket with M4 screw to the screw hole.

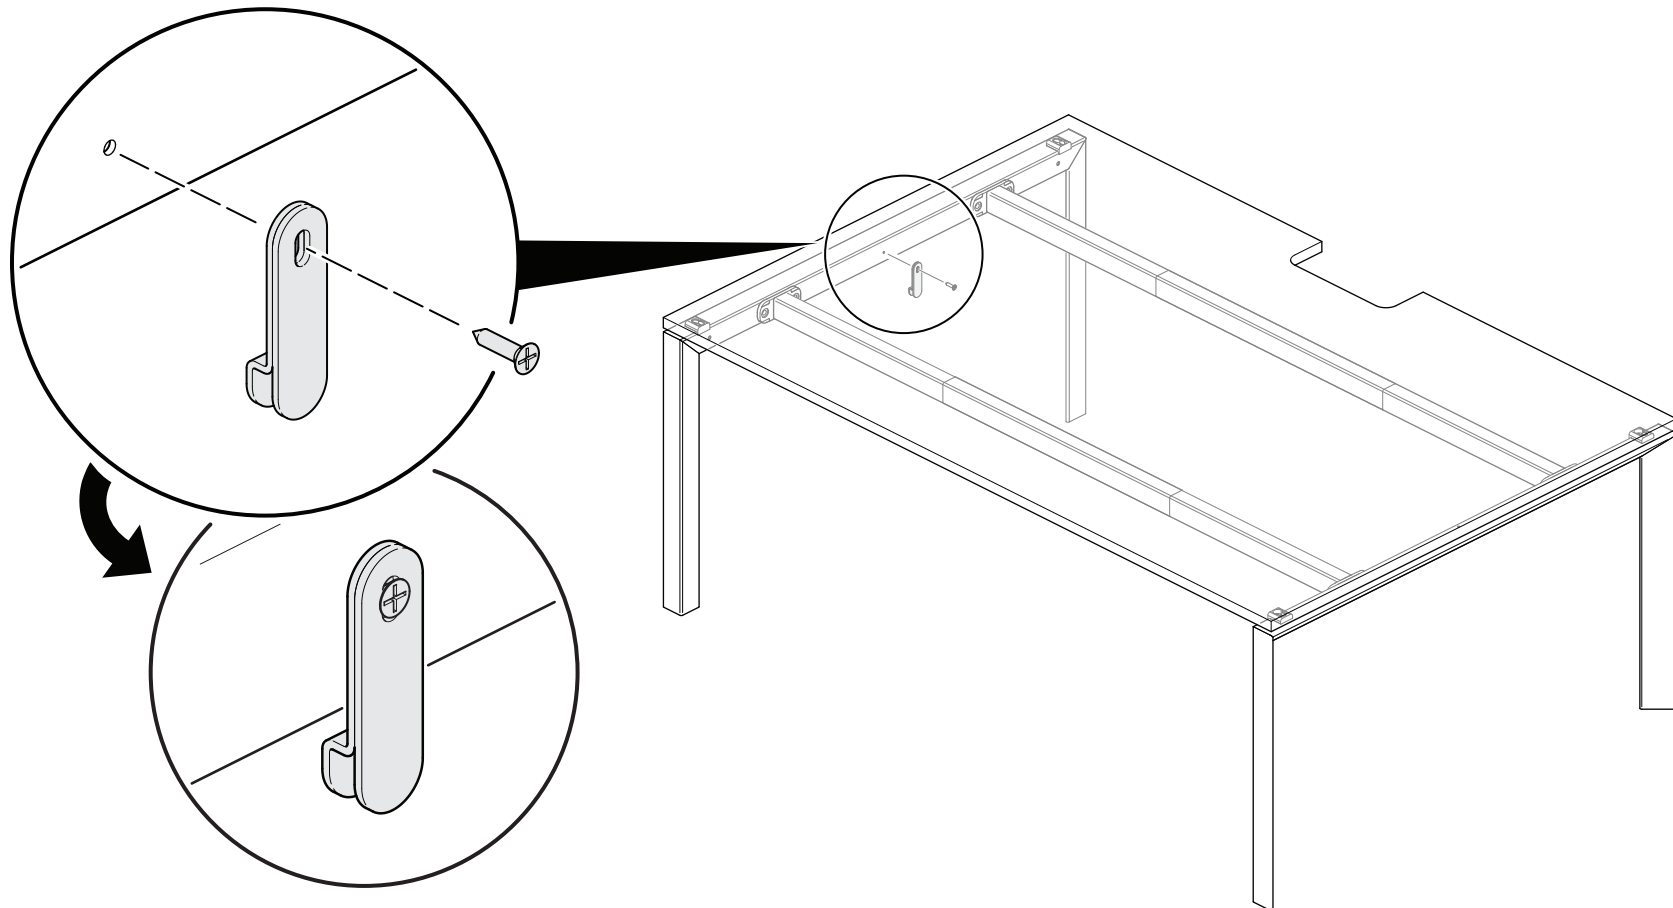

**Center Bracket**

**3. Install the side modesty panel. Make sure the panel located in between the center bracket.**

