



**WORK TABLES**  
**26"H and 28.5"H**

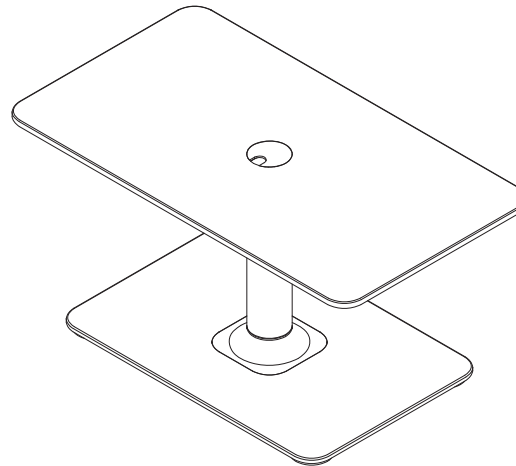


**OCCASIONAL TABLES**

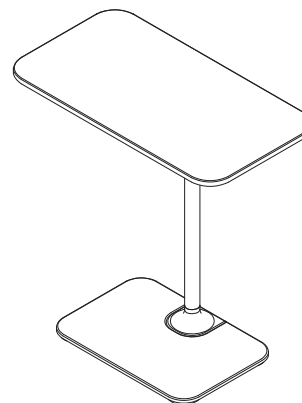


**PERSONAL TABLE**



**CUSTOMER  
SPECIFIED  
OPTIONS**

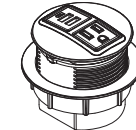


**POWER  
MODULE**

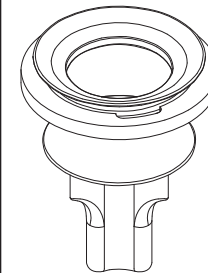


**POWER POD  
GROMMET**

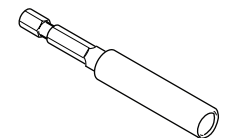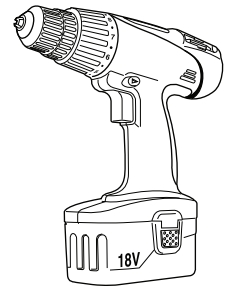


**Magnetic Extension**



**Phillips Bit**



**Hex Bit**

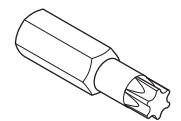

**T-30 Bit**

If you have a problem, question, or request, call  
your local dealer, or Coalesse at 1.800.627.6770  
Or visit our website: [www.coalesse.com](http://www.coalesse.com)


© 2014 Coalesse  
San Francisco, California U.S.A.  
Printed in U.S.A.

## WORK TABLES 26"H and 28.5"H


**NOTE:** If installing a Power Pod Grommet (Customer Specified Option), install onto worksurface & column before step 1. See page 5.

**NOTE:** If installing a Power Module (Customer Specified Option), install onto worksurface before step 1. See page 5.

1. Place worksurface, face down, on a clean, scratch resistant surface.
2. Place column on bottom of worksurface and install with eight (8) flat head wood screws.
3. Place base on bottom of column making sure lobe features are aligned. Install and tighten four (4) M8 washer head bolts.

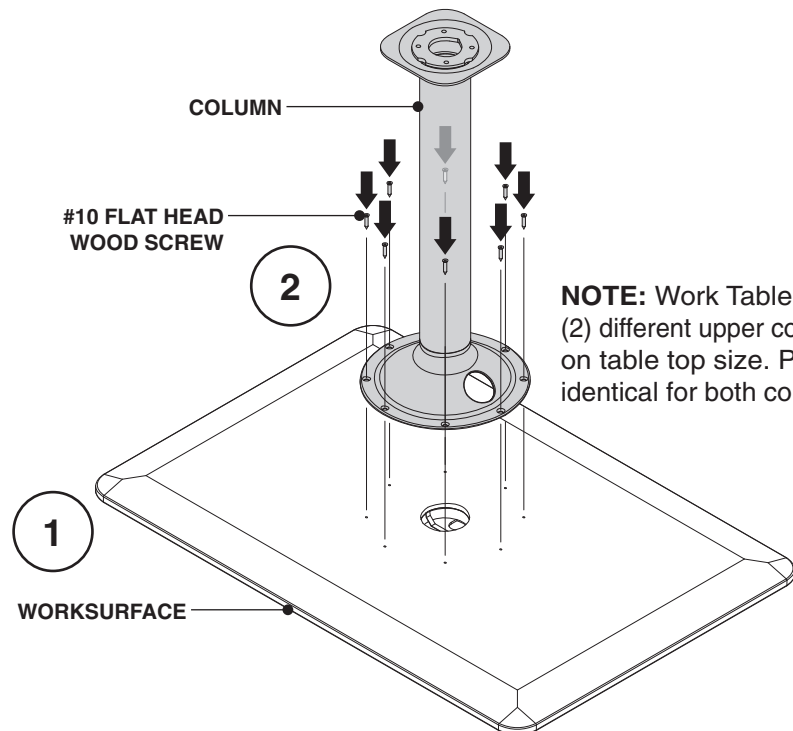

**NOTE:** Work Table columns have two (2) different upper cone sizes, depending on table top size. Product assembly is identical for both column types.


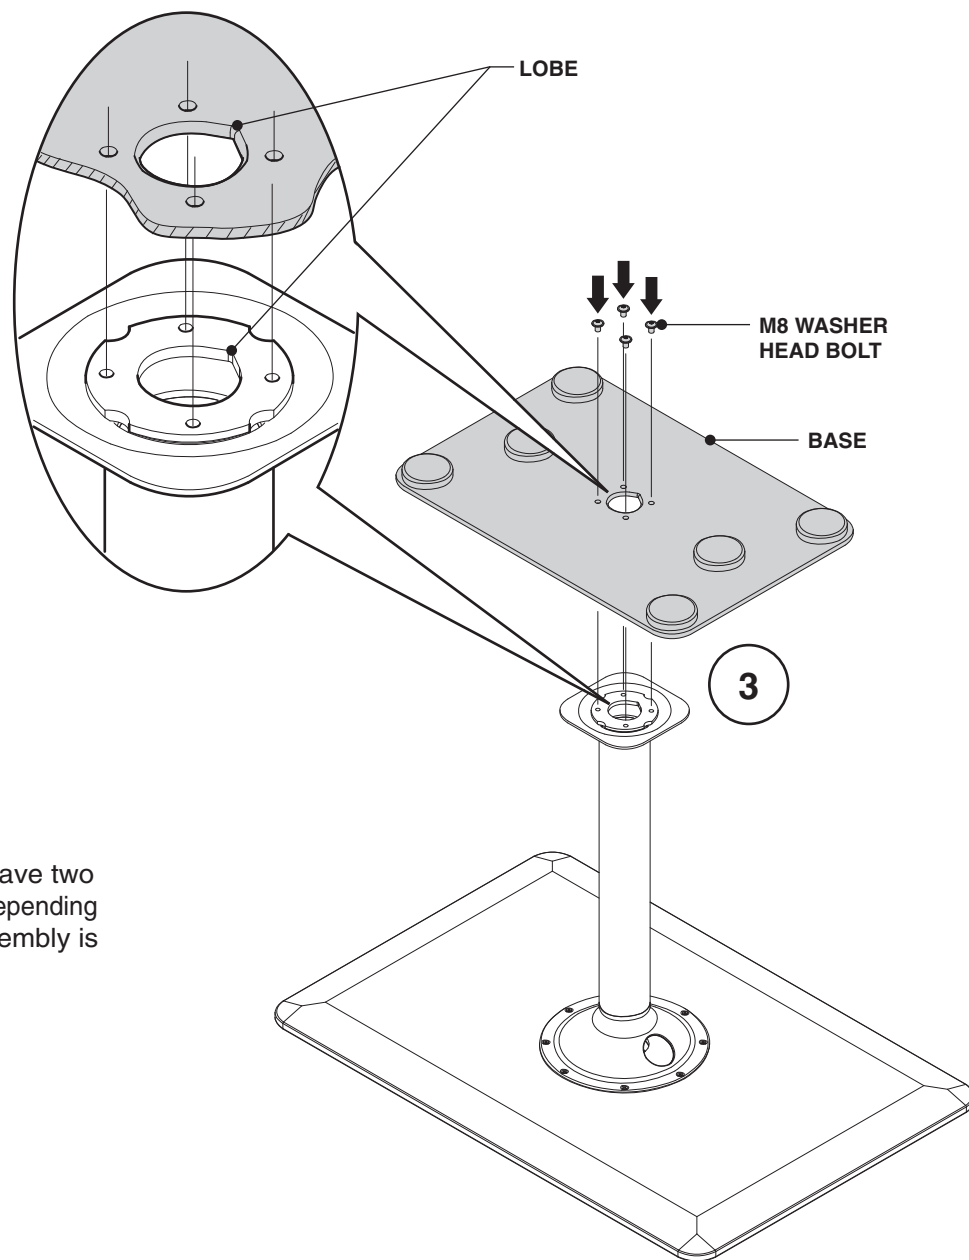


## OCCASIONAL TABLES

**NOTE:** If installing a Power Pod Grommet (Customer Specified Option), install onto worksurface & column before step 1. See page 5.


**NOTE:** If installing a Power Module (Customer Specified Option), install onto worksurface before step 1 See page 5.

- 1.** Place worksurface, face down, on a clean, scratch resistant surface.
- 2.** Place column on bottom of worksurface and install with eight (8) flat head wood screws.
- 3.** Place base on bottom of column and install with four (4) M8 washer head bolts.

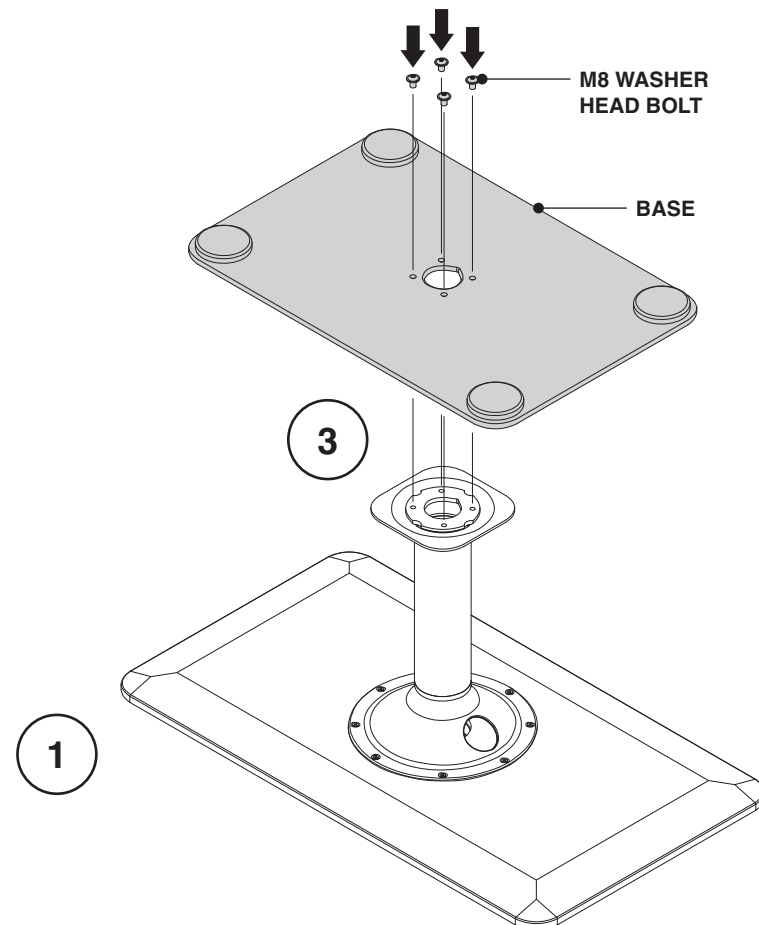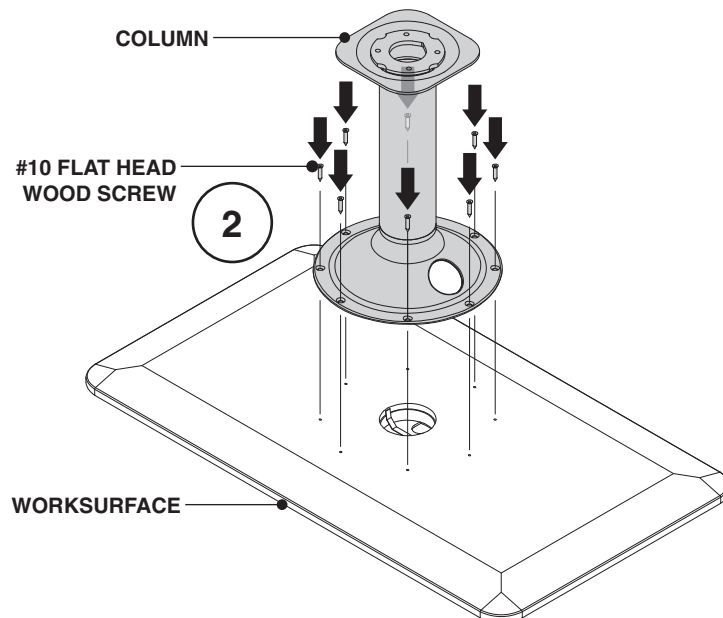

## PERSONAL TABLE


1. Place worksurface, face down, on a clean, scratch resistant surface.
2. Place base assembly on bottom of worksurface and install with seven (7) M6 x 16 flat head bolts.

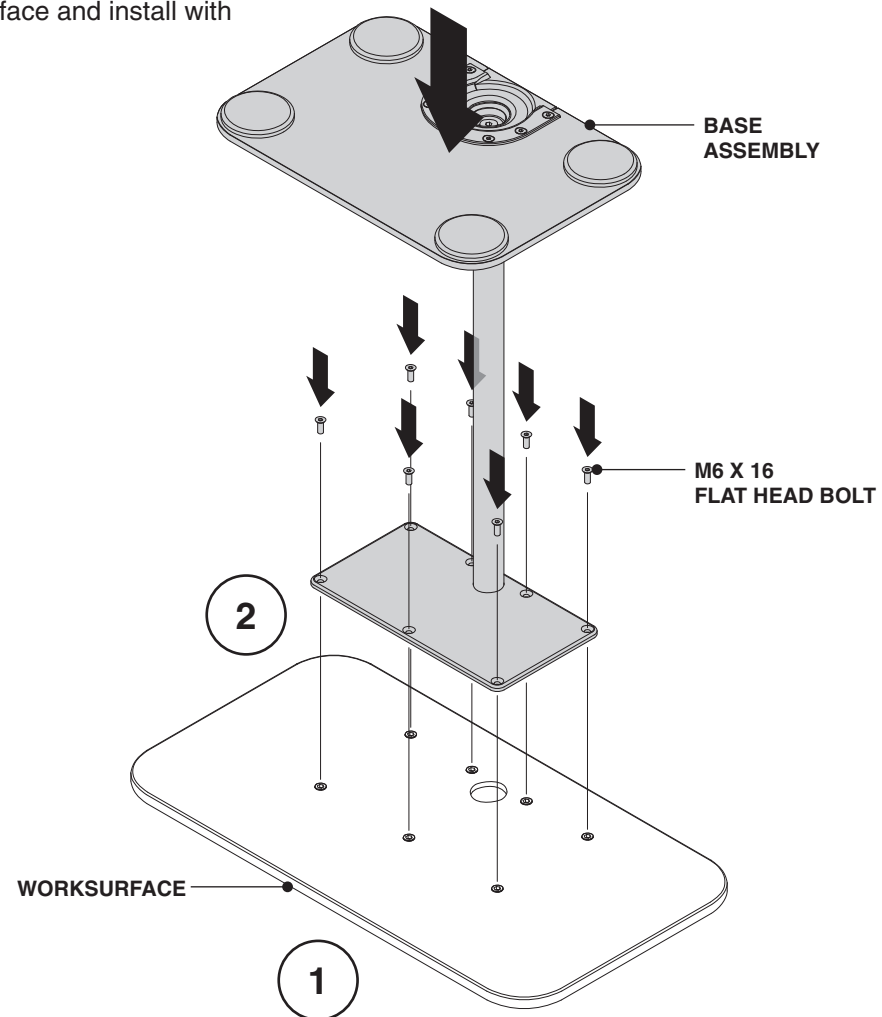

## CUSTOMER SPECIFIED OPTIONS

### POWER MODULE

1. Feed the cord on the power module through the hole and place the power module flush to the top of the worksurface.
2. Feed the threaded collar through the cord.
3. Install the threaded collar onto the power module.

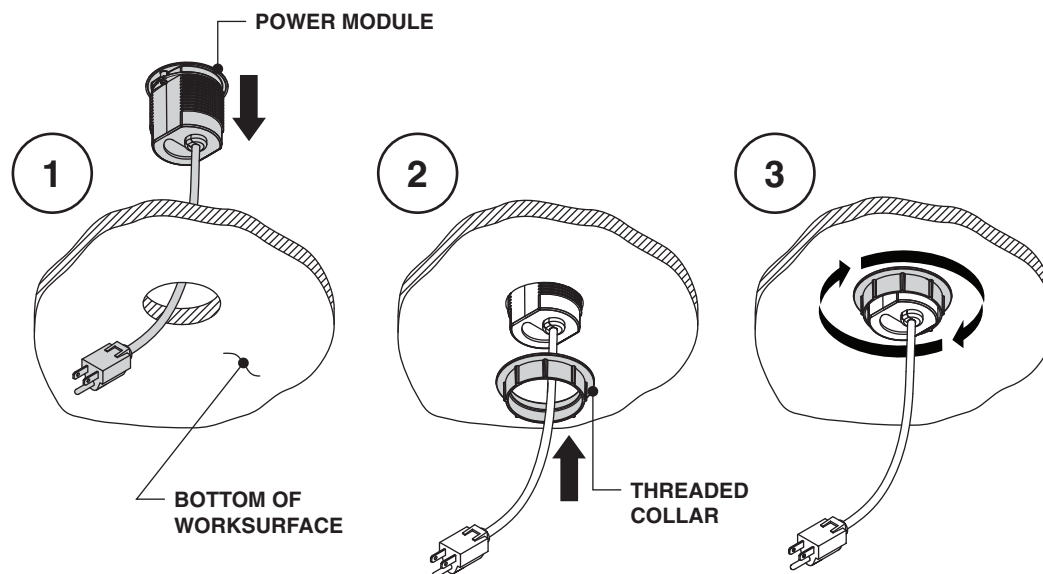

### POWER POD GROMMET

1. Press fit the table column cork into the column.
2. Attach the barrier to the threaded rod inside the table column cork by twisting the barrier until it stops spinning freely, then turn another 1/4 turn, being careful not to over tighten.
3. Place the grommet into the hole on the top of the worksurface (3a). Install the grommet collar on the underside of the worksurface and rotate to the right until it stops (approximately 25 degrees) (3b).

**NOTE:** After table has been completely assembled, orient the barrier so the logo aligns with the width of the table (3c).

