

FlowTM Frameless Installation Guide

Americas 2024

English

Guidelines for installing your
new Flow Frameless


English

3	Safety Requirements
4	Handling + Storing of Panels
5	Required Materials + Equipment
6	1830 Vertical Wall Bracket Positioning
7	2420 Vertical Wall Bracket Positioning
8	1185 Horizontal Wall Bracket Positioning
9	1830 Horizontal Wall Bracket Positioning
10	2420 Horizontal Wall Bracket Positioning
13	Warranty

Safety Requirements

Flow Frameless — Wall Mounted Dry Erase Board, Non-Seismic Applications

The building's Engineer of Record must be consulted to determine if there are any seismic requirements.

	⚠ CAUTION CRUSH HAZARD. Failure to properly secure board could result in personal injury.
	⚠ ATTENTION RISQUE D'ÉCRASEMENT. Ne pas attacher la planche de manière sûre pourrait entraîner des blessures personnelles.
SAFETY INSTRUCTIONS	
Read all assembly directions before beginning installation.	
Building construction varies greatly. The Building's Engineer of Record is responsible for the design of building walls which the boards are attached to and must verify the adequacy of the mounting hardware, even if provided by Polyvision.	
The building owner or designated agent is responsible for verifying that the installation is in compliance with all local codes and regulations.	
INSTRUCTIONS DE SÉCURITÉ	
Lisez l'ensemble des instructions d'assemblage avant de démarrer l'installation.	
La construction des bâtiments varie grandement. L'ingénieur d'enregistrement du bâtiment est responsable de la conception des murs sur lesquels sont attachées les planches et doit vérifier que le matériel de montage est adéquat, même si ce dernier est fourni par PolyVision.	
Le propriétaire du bâtiment ou l'agent désigné a la responsabilité de vérifier que l'installation est conforme à l'ensemble des codes et réglementations locaux.	
1078781001 Rev A	

Verify Wall Construction

CAUTION! Adequate wall construction is required to support the weight of the board. Minimum wall construction must be capable of supporting weight amounts listed in Table 1 on page 4.

Minimum Required Wall Construction

Drywall with metal studs:

- Must be at least 0.6 mm (.02") thick Metal stud 48.8 mm x 50 mm (1.92" x 1.97")
- Studs on maximum 600 mm (24") centers
- Must be at least 2 x 12,5 mm (.49") Type X gypsum drywall
- 35 mm (1.34") drywall screws on 250 mm (12") centers

Drywall with wooden studs:

- Stud grade SPF, DF-L or Hem-Fir 45 mm x 70 mm (1.5" x 3.5")
- Studs on 600 mm (24") centers
- Must be at least 25 mm (5/8") thick Type X gypsum drywall for the US or 2 x 12,5 mm (1/2") for EU
- 35 mm (#6 x 1-1/4") drywall screws on 250 mm (12") centers



Handling + Storing of Panels

Handling


- When CeramicSteel panels are shipped, they are protected by craft paper or a self-adhesive transparent polyethylene film. Keep panels in the original package until installation.
- Handle with care to prevent damage.
- Never slide panels off the stack during handling. Panels should always be lifted and moved in a vertical position.
- Never place a panel in a vertical position on the floor. This is to prevent damage to the edges.
- Prevent dirt from settling on and between panels to avoid surface damage, scratches or defects.
- Follow all safety instructions regarding personal protection when processing the panels.
- Protect panel surface against sawdust and sparks (metal particles).
- CeramicSteel will chip when cut or drilled with power tools. Hand-cutting can cause chipping up to approx. 2 mm from the edge. When chipping is in excess of 2 mm, please check the state of cutting tools and check that the panel is adequately supported and clamped to prevent it from vibrating.
- All cut or drilled sections should be protected against humidity with PVC tape and/or by covering/sealing profiles or sealing washers.
- For detailed processing instructions, please refer to the panel processing instructions.

Storing

- Keep panels dry and free of debris.
- Store panels inside temps 50-90 °F (10-32 °C).
- Any panels stored outside should be protected from inclement weather conditions.
- Place panels on hard, flat surfaces that are not subject to standing water.
- CeramicSteel panels should be stacked no more than three high.
- Panels should never be stored vertically or in such a way that the corners are vulnerable to damage.

If you have a problem, question, or a request, call your local fabricator, your regional sales manager or Polyvision Customer Service. Polyvision’s global customer service team can be contacted on polyvision.com.

Table 1 Horizontal Installation	
Product	Weight (kg/lb)/panel
Flow Frameless 1185	25 kg / 55.1 lb
Flow Frameless 1830	28 kg / 61.73 lb
Flow Frameless 2420	37 kg / 81.57 lb

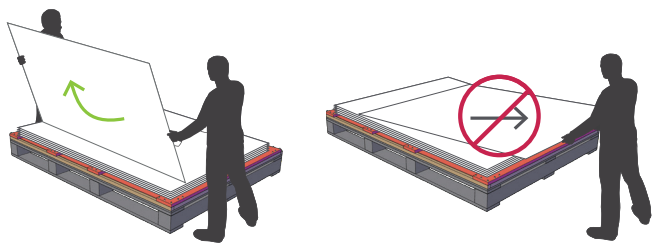


Required Materials + Equipment

Required Equipment


- Drill
- #2 Bit
- Glass suction cup lifters (2)
- Pliers
- Pencil
- Level or laser
- 2 or 3-step ladder
- Tape measure

Materials Provided


NOTE: Items are not drawn to scale. Quantity of wall anchors and screws will vary per product due to the various widths. Board size determines the quantity of anchors and screws.*

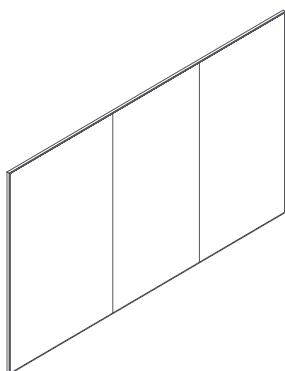

Horizontal oriented panels
or vertical oriented panels

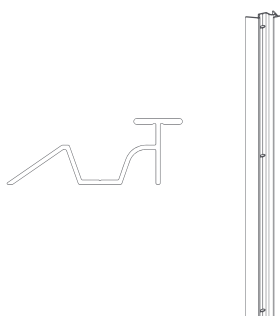

Vertical wall brackets

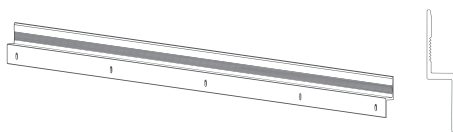

Horizontal wall brackets

Flow Frameless Panels	
Panel A	Right
Panel B	Intermediate
Panel C	Left



Anchors




Screws

Table 2										
Product		Panel A (right)			Panel B (intermediate)			Panel C (left)		
		# Vertical Brackets	# Horizontal Brackets	# Screws/ Anchors	# Vertical Brackets	# Horizontal Brackets	# Screws/ Anchors	# Vertical Brackets	# Horizontal Brackets	# Screws/ Anchors
Vertical Flow Frameless										
	Flow Frameless 1185	1	2	15	1	2	15	0	2	10
	Flow Frameless 1830	1	2	17	1	2	17	0	2	10
	Flow Frameless 2420	1	3	24	1	3	24	0	3	15
Horizontal Flow Frameless										
	Flow Frameless 1830	1	2	15	1	2	15	0	2	10
	Flow Frameless 2420	1	2	25	1	2	25	0	2	20



Flow Frameless


1830 Vertical Wall Bracket Positioning

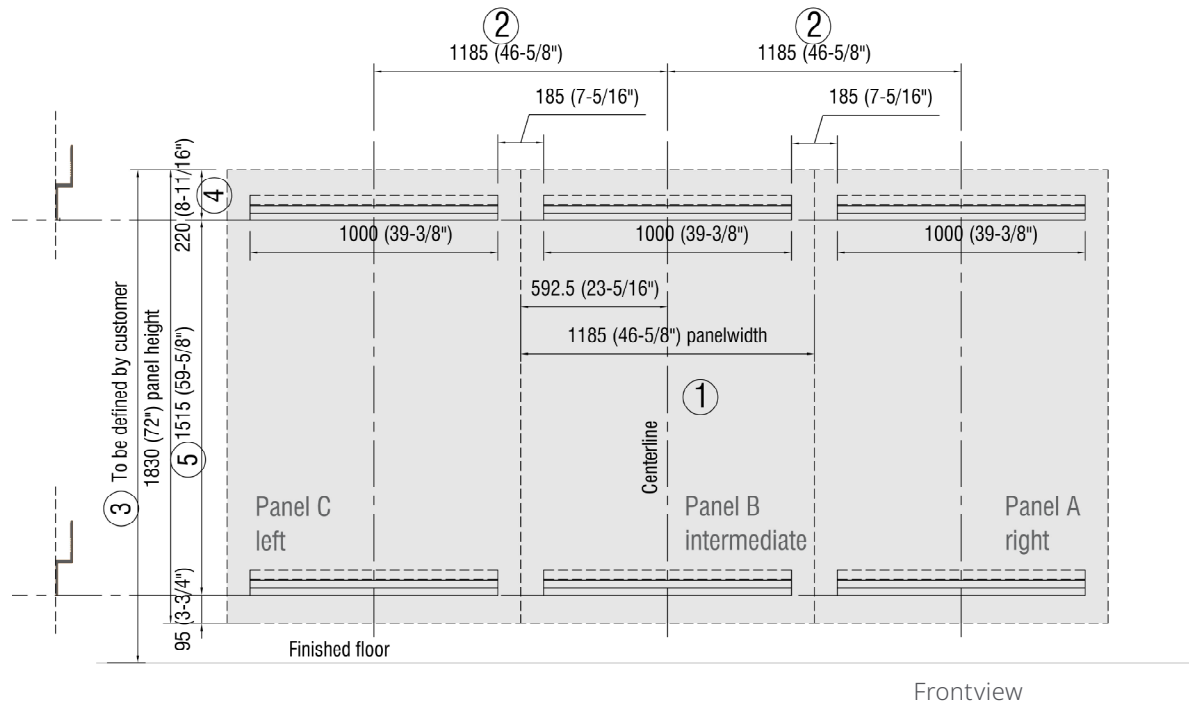

1. Define the centerline of the Flow Frameless installation
2. Define the centerline of panel A and panel C. This will be the centerline of the brackets.
If uneven panels: from center of wall left and right 1185 mm (46-5/8").
If even panel: from center of wall left and right 592.5 mm (23-5/16").
3. Define the top of the wall to install from the ground level.
4. Measure 220 mm (8-11/16") down from top of predefined top of wall.
This mark is the bottom of the top wall bracket
5. Measure 1515 mm (59-5/8") down from the first horizontal wall bracket to define the position of the second bracket.
6. Use the predrilled holes of the wall bracket as a template to mark all the holes.
Pre-drill 6,5 mm (1/4") hole in the drywall. Insert all anchors into the holes and screw them flush.
Fix all the brackets. Make sure the top brackets are perfectly aligned, leveled and fixed firmly.
Repeat for all the brackets.

Flow Frameless

2420 Vertical Wall Bracket Positioning

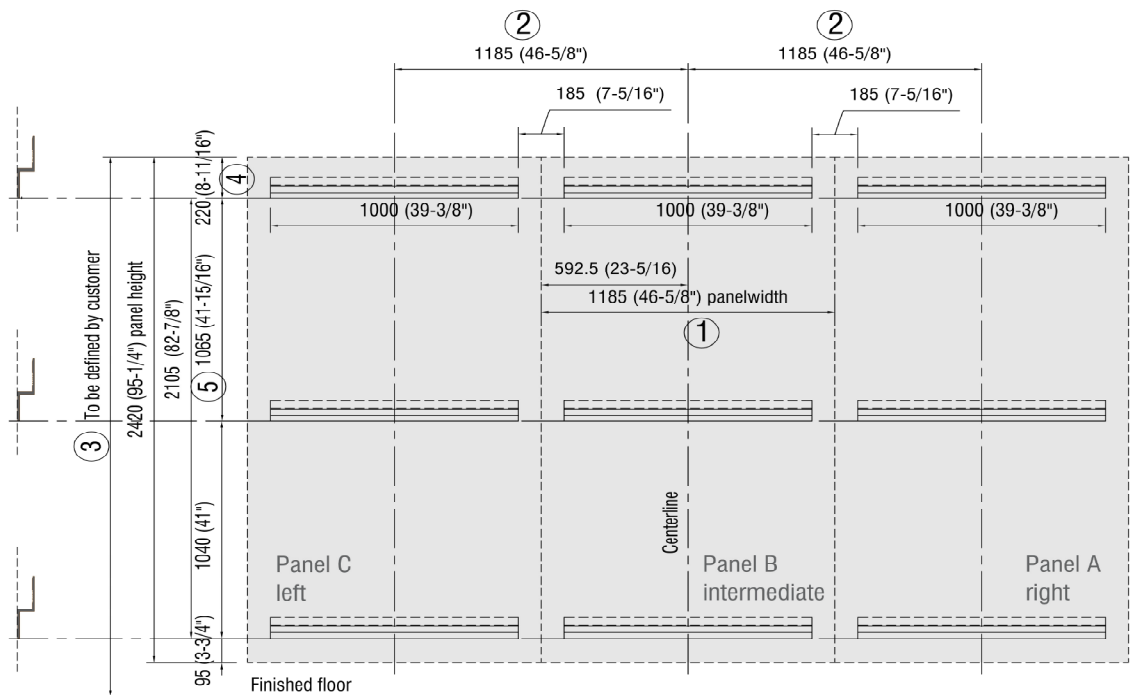


Frontview

1. Define the centerline of the Flow Frameless installation
2. Define the centerline of panel A and panel C. This will be the centerline of the brackets.
If uneven panels: from center of wall left and right 1185 mm (46-5/8").
If even panel: from center of wall left and right 592,5 mm (23-5/16")
3. Define the top of the wall to install from the ground level.
4. Measure 220 mm (8-11/16") down from top of predefined top of wall.
This mark is the bottom of the top wall bracket
5. Measure 1065 mm (41-15/16") down from the first horizontal wall bracket to define the position of the second and 2105 mm down to the third.
6. Use the predrilled holes of the wall bracket as a template to mark all the holes.
Pre-drill 6,5 mm (1/4") hole in the drywall. Insert all anchors into the holes and screw them flush.
Fix all the brackets. Make sure the top brackets are perfectly aligned, leveled and fixed firmly.
Repeat for all the brackets.



Flow Frameless


1185 Horizontal Wall Bracket Positioning

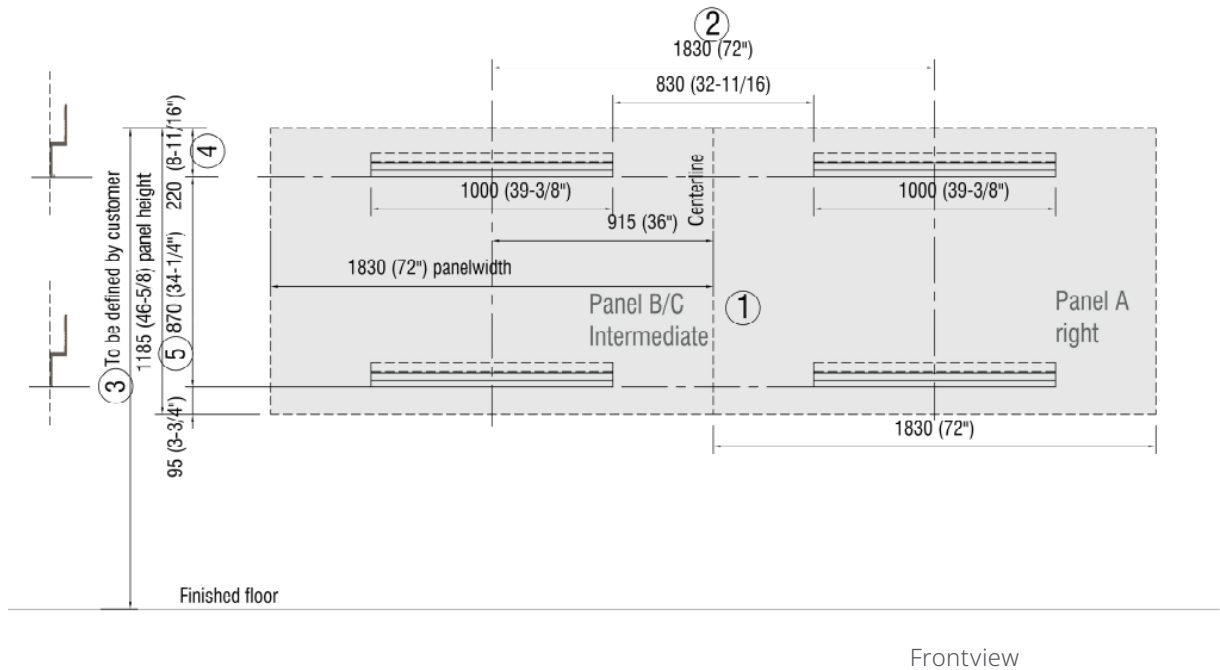


1. Define the centerline of the Flow Frameless installation
2. Define the centerline of panels . This will be the centerline of the brackets.
Uneven amount of panels: from center of wall left and right 1220 mm (48").
Even amount of panel: from center of wall left and right 610 mm (24")
3. Define the top of the wall to install from the ground level.
4. Measure 220 mm (8-11/16") down from top of predefined top of wall.
This mark is the bottom of the top wall bracket.
5. Measure 870 mm (34-1/4") down from the first horizontal wall bracket to define the position of the second bracket.
6. Use the predrilled holes of the wall bracket as a template to mark all the holes. Pre-drill 6,5 mm (1/4") hole in the drywall. Insert all anchors into the holes and screw them flush. Fix all the brackets.
Make sure the top brackets are perfectly aligned, level and fixed firmly. Repeat for all the brackets.

Flow Frameless


2420 Horizontal Wall Bracket Positioning

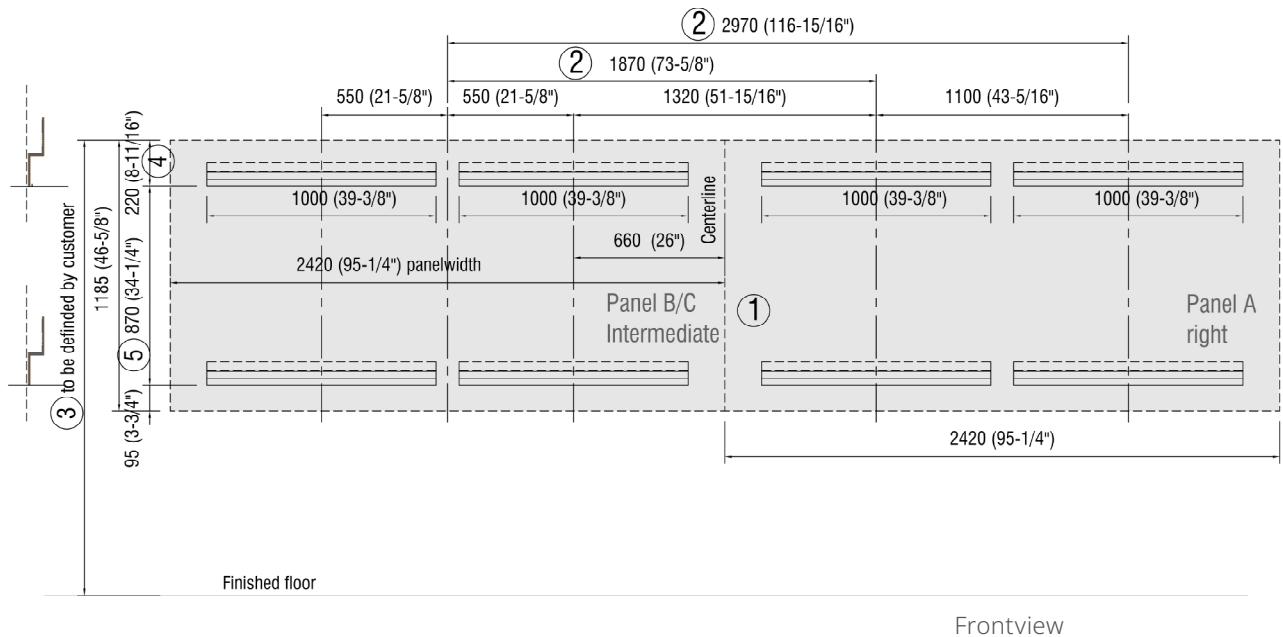


1. Define the centerline of the Flow Frameless installation
2. Define the centerline of panel A and panel B/C. This will be the centerline of the brackets.
If uneven panels: from center of wall left and right 550 mm (21-5/8") + 1320 mm (51-15/16") + 1100 mm (43-5/16"). If even panel: from center of wall left and right 660 mm (26") + 1100 mm (42-5/16").
3. Define the top of the wall to install from the ground level.
4. Measure 220 mm (8-11/16") down from top of predefined top of wall.
This mark is the bottom of the top wall bracket
5. Measure 870 mm (34-1/4") down from the first horizontal wall bracket to define the position of the second bracket.
6. Use the predrilled holes of the wall bracket as a template to mark all the holes.
Pre-drill 6,5 mm (1/4") hole in the drywall. Insert all anchors into the holes and screw them flush.
Fix all the brackets. Make sure the top brackets are perfectly aligned, leveled and fixed firmly.
Repeat for all the brackets.

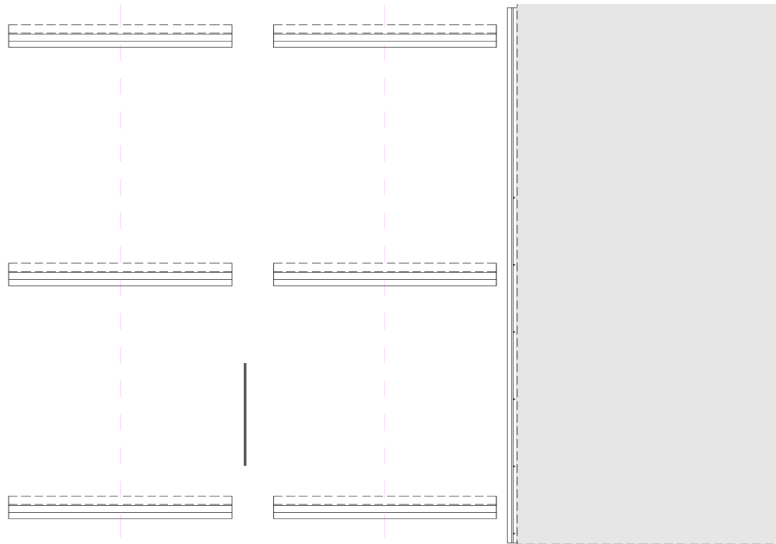

7. Place Panel A onto the wall brackets by lifting it up, holding it against the wall above the brackets and slide it downwards in the wall brackets. Make sure the panel is perfectly level.
8. Clean the groove before inserting the vertical profile. Insert the vertical profile in the groove starting 10 mm (3/8") from the top of the panel. Use the pre-drilled holes as a template to mark the holes. Remove the profile and pre-drill 6,5 mm (1/4") hole in the drywall. Insert anchors into the holes and screw them flush. Reinsert the vertical profile and fix the profile at the area where the profile touches the wall. Make sure the profile is fixed at least on top, middle and bottom.
Make sure the vertical profile is inserted completely in the groove over the length of the panel.

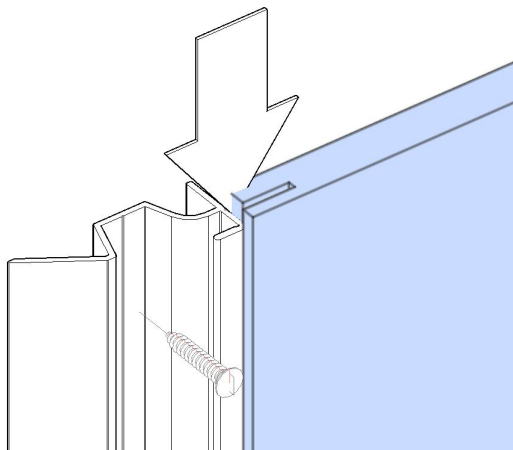


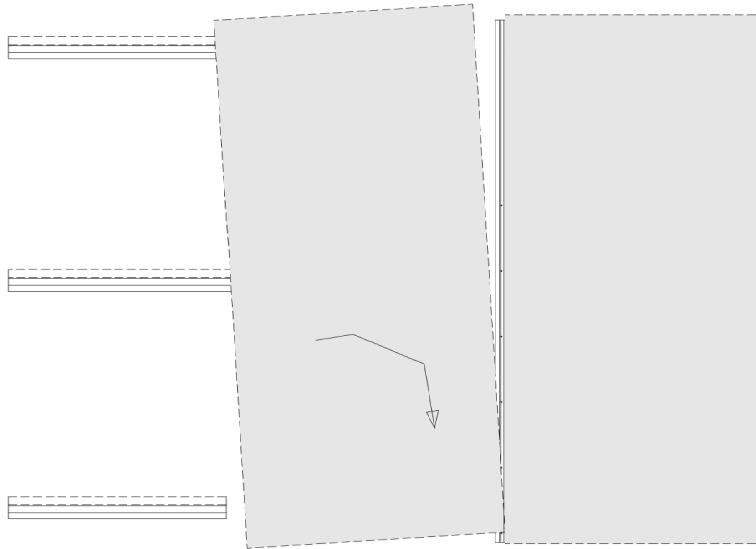

9. Place Panel B/C: **carefully** insert bottom of panel at an angle at the bottom corner. Let the panel slide towards the previous installed panel, make sure the panels make contact over the length of the panel and snap it down firmly onto the horizontal wall bracket.

Repeat as many times as there is a panel B.
Once all B panels are installed, repeat for panel C

Tip: To remove the panel, use opposite handling from installation.

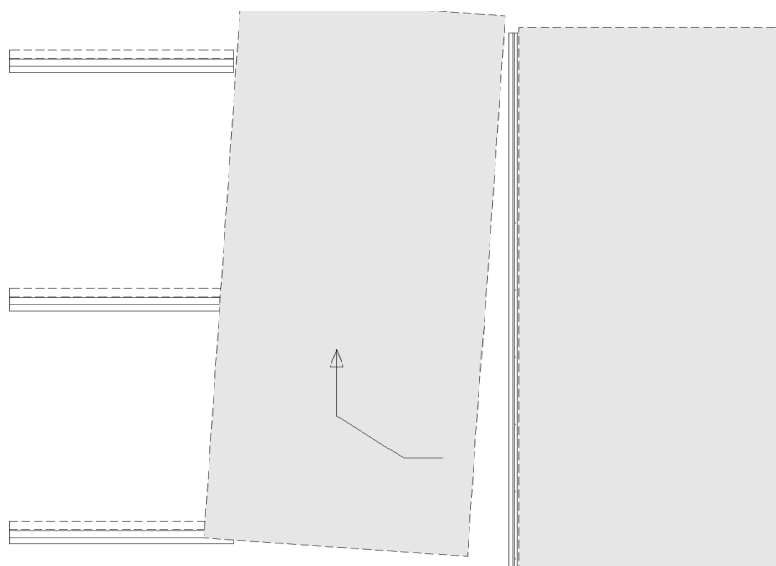

Collaborative Products Warranty

CeramicSteel Surface: Forever warranty

Polyvision warrants that all porcelain-enameled surfaces and/or products made with CeramicSteel will retain its writing and erasing qualities and maintain its gloss variance and color consistency for the life of the building or for as long as the product is in use, whichever comes first.

Panel Construction and Mobile: 10 year limited warranty

Polyvision warrants that our panels, under normal atmospheric conditions and when sealed from moisture, will not delaminate from the substrate or warp for a period of 10 years.

Polyvision warrants that our Mobile products, when used under normal conditions, will perform as intended for a period of 10 years

Accessories: 2 year limited warranty

Polyvision warrants that our accessories, including but not limited to Collaborative ToolBar and round magnetic eraser, when used under normal conditions will perform as intended for a period of 2 years. Consumables like markers and chalk sticks are not covered by the Accessories warranty

Alternative Materials: Limited Warranty

Polyvision warrants that our glass products, including but not limited to glassboards, when used under normal conditions will perform as intended for a period of 5 years. Manufacturing defects are warranted for a period of 5 years. Polyvision warrants that our tackable products, including but not limited to Tac, when used under normal conditions will perform as intended for a period of 2 years. Tackable products are warranted under the conditional terms of interior use only.

Should any failure to conform to this warranty become apparent, then, upon written notice from the customer, Polyvision, at its option, will correct such nonconformity by repair or replacement. Correction in the manner provided above shall constitute a fulfillment of all liabilities of Polyvision with respect to the quality of the CeramicSteel. The warranty is applicable only under normal usage and maintenance and does not cover defects caused by improper handling, vandalism or abuse, or arising from failure to follow Polyvision's instructions and recommendations for maintenance.

The warranty is voided if any modifications are made to the products by the customer or other trades with or without Polyvision's written consent or prior knowledge. The warranty does not include the cost of removal or reinstallation. This warranty is effective as of July 12, 2019, and supersedes the terms and conditions of all prior surface warranties issued to the customer by Polyvision.

This limited warranty is the sole remedy for product defects and no other express or implied warranty is provided, including but not limited to any implied warranties of merchantability or fitness for a particular purpose. Polyvision shall not be liable for consequential or incidental damages arising from any product defect.



Polyvision Americas

4301 N Wood Drive
Okmulgee, OK 74447 USA

T 1 888 325 6351
E info@polyvision.com

Polyvision Europe

Zuiderring 56
3600 Genk, Belgium

T +32 89 32 31 30
E EMEAsupport@polyvision.com

Polyvision Asia-Pacific

15th Floor, Kinwick Centre
32 Hollywood Road, Central District
Hong Kong

T +852 2520 0160
E APACsupport@polyvision.com

SURFACEMATTERS™

©2024 Polyvision Corporation. All rights reserved. Trademarks used herein are the property of Polyvision Corporation or of their respective owner. Polyvision Corporation reserves the right to make changes in product design, construction or detail, and to discontinue any product or material without notice.

polyvision.com



05-20-2024 AMERICAS