
Steelcase


442 Gesture[™] Chair - Control Knob Replacement



1. Use very small flat bladed screwdriver to pry off cap of control knobs.

2. Use T-25 Torx driver to remove screws. Replace the control knobs while holding the VBS knob in place.

3. Fasten with screws and snap in new caps.

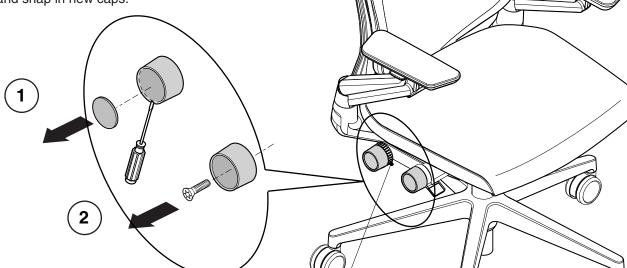

VBS KNOB

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at 888.STEELCASE (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com

© 2013 Steelcase Inc. Grand Rapids, MI 49501 U.S.A.

Page 1 of 1 939544214 Rev C

SMALL (2 - 3")

T-25 TORX

Printed in U.S.A.

